

The logo for HydroMet, featuring a stylized white slash followed by the word "HydroMet" in a bold, white, sans-serif font.

/HydroMet

User Manual

HyQuant

The KISTERS logo, consisting of a stylized white 'K' icon followed by the word "KISTERS" in a bold, white, sans-serif font. Below the name is the tagline "Empowering decisions of tomorrow" in a smaller, white, sans-serif font.

KISTERS
Empowering decisions of tomorrow

Table of Contents

I	Disclaimer	4
II	Glossary + Abbreviations	5
III	Scope of Delivery	7
IV	Optional Accessories	8
V	Safety Instructions	9
VI	Specific Safety Instructions	10
Part I	Introduction	11
1.1	KISTERS HyQuant Sensors	11
1.1.1	Types of HyQuant Sensors	12
1.1.2	Why RADAR technology?	12
1.1.3	HyQuant Components	13
Part II	Installation	14
2.1	Site Selection Criteria for L and V	14
2.2	Orientation of the HyQuant	15
2.3	Standard Installation Bracket	17
2.4	Optional Bracket for Round Tubes	18
2.5	Power Supply	18
2.6	Cable and Connector Pinout	18
Part III	Configuration	20
3.1	Configuration Software	20
3.1.1	System Requirements	20
3.1.2	HyComm Updates	20
3.1.3	Firmware Updates	21
3.2	Enabling of the Local Wi-Fi Hotspot for Configuration	21
3.2.1	Enable with Reed Switch/Magnet	22
3.2.2	Enable via Modbus	22
3.2.3	Enable via SDI-12	22
3.2.4	Enable via Power Cycle	22
3.2.5	Automatic Disabling	23
3.3	Filters	23
3.4	Rain Filter for Velocity Measurements	24
3.4.1	Rain Filtering Principle in HyQuant	25
3.5	Reference Level	27
3.6	Operational Range	27
3.7	Configuration for Q Calculation	27
3.8	Settings	28
3.8.1	Parameters	28
3.8.2	Units	32
Part IV	Operation	33

4.1	Radar Beams	33
4.2	Quality Flags	35
4.3	SDI-12	36
4.3.1	Standard Commands	36
4.3.2	Extended Commands	44
4.4	Modbus	44
4.4.1	Default Settings	44
4.4.2	Modbus Register Mapping	45
Part V	Maintenance	47
Part VI	Troubleshooting	49
Part VII	Repair	51
Part VIII	Technical Data	52
Part IX	Obligations of the Operator and Disposal	54
9.1	Obligations of the Operator	54
9.2	Dismantling / Disposal	54
Part X	Regulatory and Compliance Information	56

I Disclaimer

The information provided in this manual was deemed accurate as of the publication date. However, updates to this information may have occurred.

This manual does not include all of the details of design, production, or variation of the equipment nor does it cover every possible situation which may arise during installation, operation or maintenance. KISTERS shall not be liable for any incidental, indirect, special or consequential damages whatsoever arising out of or related to this documentation and the information contained in it, even if KISTERS has been advised of the possibility of such damages.

Any errors found in any KISTERS product should be reported to KISTERS where every effort will be made to quickly resolve the problem.

Copyright Notice: No parts of this work may be reproduced in any form or by any means without the written permission of the publisher. KISTERS waives copyright for users to print out parts of the documentation in hard copy for their own use only.

Trademark Notice: KISTERS products and services referred to in this document are trademarks or registered trademarks of KISTERS. Other product names used may or may not be the trademarks of their respective owners.

© 2026 | KISTERS. Any rights not expressly granted herein are reserved.

This document is public.

II Glossary + Abbreviations

Term	Description
CE	Short for French “ C onformité E uropéenne”; CE Marking on a product indicates that the manufacturer verifies that their products meet the European Union's (EU) health, safety, and environmental protection standards. It is a legal obligation that confirms compliance with the Product Directives.
dB	Short for decibel; the decibel is a relative unit of measurement that equals one-tenth of a bel (B). It measures the intensity of an electrical signal by comparing it with a specific level on a logarithmic scale.
ESD	Short for Electrostatic Discharge; the release of stored static electricity. Most commonly, the potentially damaging discharge of high voltages that occurs when an electronic device is touched by a charged body.
Doppler	Short for Doppler Radar; a radar that is specifically designed to use the Doppler effect to generate information on the velocity of objects that are located at a distance. This is achieved by reflecting a microwave signal off an intended target and analysing how the motion of the object has affected the frequency of the returned signal.
FCC	Short for F ederal C ommunication C ommission; the FCC logo or mark is a symbol used on electronic products produced or marketed in the United States. It shows that the device's electromagnetic radiation is under the limits defined by the Federal Communications Commission, and the manufacturer has complied with the Supplier's Declaration of Conformity authorization procedures.
FMCW	Short for Frequency-Modulated Continuous Wave; an FMCW radar has the ability to alter its operating frequency while measuring. This means that the transmission signal is modulated in either frequency or phase. Changes in frequency or phase are technically necessary to perform radar measurements through runtime measurements.
GHz	Short for gigahertz, a frequency unit equal to a billion hertz or cycles per second.
GND	Short for ground; in electronics, the ground serves as the reference point for all signals or a common path in an electrical circuit from which all the voltages can be measured.
Gyroscope	A tool employed to measure or uphold orientation.
HDPE	Short for high-density polyethylene, a thermoplastic polymer.
IP	Short for Ingress Protection; IP ratings indicate the degree of protection provided by an enclosure against solids and liquids.
L	Short for Level or Water Level.
Modbus RTU	Modbus is a communication protocol for transmitting data, which follows a request-response model. The protocol uses a Client-Server architecture where the Client sends a request to the Server device, which responds accordingly. The language of the protocol is clear, concise and designed to enable interoperability among different devices. Modbus RTU is the prevailing option for serial connections. With Modbus RTU, data is transmitted in binary format.

Term	Description
Output rate	The output rate pertains to how frequently the output data is refreshed. It remains constant and is independent of filter settings, since the data is updated discretely during each output cycle. The unit for the sample rate is Hertz (Hz). It is equivalent to the reciprocal second, as $1 \text{ Hz} = 1 \text{ s}^{-1}$.
Q	International short notation of the hydrological discharge determined for a stream cross-section.
Radar	Short for R adio D etection and R anging; a system or device that employs short radio waves to determine the position or velocity of objects by measuring the direction, frequency and timing of reflected signals.
Radome	A blend word made from radar and dome - the radome is the shelter that protects the radar antennas.
RS-485	RS-485 is an industrial standard that establishes the electrical interface and physical layer for point-to-point communication between electrical devices. It effectively enables long cabling distances in environments with strong electrical interference and permits multiple devices to communicate on the same bus. Electrical signalling is balanced.
Sample rate	HyQuant utilizes radar technology to convert analogue water level changes into a digital data stream. By sampling water height amplitude at specific time intervals, HyQuant produces discrete data. The sampling rate is the frequency of sample collection per second, measured in samples per second (sps). The unit for the sample rate is Hertz (Hz). It is equivalent to the reciprocal second, as $1 \text{ Hz} = 1 \text{ s}^{-1}$.
SDI-12	Serial Digital Interface at 1200 baud, an asynchronous serial communications protocol for smart sensors, SDI-12 sensors reply to commands send by the data logger, the standard also specifies supply voltage and current and including modes for low-power operation.
SLA	Short for Sealed Lead-Acid; a sealed lead-acid battery, also known as a gel cell, is a type of lead-acid battery where the electrolyte, which is sulphuric acid, is thickened so that it does not spill out.
SNR	Short for Signal-to-Noise Ratio; Signal-to-Noise Ratio (SNR) is a measure of the relative strength of the desired signal to the noise signal at a specific point in time. A higher number indicates better performance. It is typically expressed in decibels (dB).
USB	Universal Serial Bus, an asynchronous serial communication protocol for peripheral devices.
V	Short for Velocity or Surface Water Velocity.
V DC	Short for Volt Direct Current.
Wi-Fi	Certification mark of the interoperability of wireless computer networking devices using wireless network protocols based on the IEEE 802.11 family.

III Scope of Delivery

- 1 × HyQuant Sensor device
- 1 × Two-part mounting bracket (tilt and swivel)
- 1 × 10 m cable with 8-pin female angled connector and open-ended wires
- 1 × Torx key (T10)
- 1 × Magnet
- 1 × Test certificate
- 1 × Quick installation guide

IV Optional Accessories

- HyQuant user manual (in English language)
- Configuration software HyComm
- HyComm user manual
- Tube/Pole mount bracket
- 20 m connection cable with 8-pin angled plug connector (socket) and open wire ends
- 30 m connection cable with 8-pin angled plug connector (socket) and open wire ends
- 40 m connection cable with 8-pin angled plug connector (socket) and open wire ends
- SDI-12/USB interface adapter
- RS-485/USB interface adapter
- KISTERS iRIS 270/350 FX data logger or KISTERS IoTa Sensor Node

V Safety Instructions

-  Read the user manual including all operating instructions prior to installing, connecting and powering up the KISTERS HyQuant. The manual provides information on how to operate the product. The manual is intended to be used by qualified personnel, i.e. personnel that have been adequately trained, are sufficiently familiar with installation, mounting, wiring, powering up and operation of the product.
- Keep the user manual on hand for later reference!
- If you encounter problems understanding the information in the manual (or part thereof), please consult the manufacturer or its appointed reseller for further support.
- KISTERS HyQuant is intended to be used in hydrometeorological or environmental monitoring applications.
- Before starting to work, you have to check the functioning and integrity of the system.
 - Check for visible defects on the HyQuant, this may or may not include any or all of the following: mounting facilities, connectors and connections, mechanical parts, internal or external communication devices, power supplies or power supply lines, etc.
 - If defects are identified that could compromise operational safety, work must be stopped immediately. This applies to defects detected both before work begins and during operation.
- Do not use the KISTERS HyQuant in areas where there is a danger of explosion.
- The present user manual specifies environmental/climatic operating conditions as well as mechanical and electrical conditions. Installation, wiring, powering up and operating the KISTERS HyQuant must strictly comply with these specifications.
- Perform maintenance only when tools or machinery are not in operation.
- If guards are removed to perform maintenance, replace them immediately after servicing.
- Never make any electrical or mechanical diagnostics, inspections or repairs under any circumstances. Return the product to the manufacturer's named repair centre. You can find information on how to return items for repair in the relevant section of the KISTERS website.



Disposal instructions: After taking the KISTERS HyQuant out of service, it must be disposed of in compliance with local waste and environmental regulations. The KISTERS HyQuant is never to be disposed of in household waste!



Inputs and outputs of the device are protected against electric discharges and surges (so-called ESD). Do not touch any part of the electronic components! If you need to touch any part, please discharge yourself, i.e. by touching grounded metal parts.

The warnings used in this user manual classify the type and severity of a given hazard. The resulting hazard levels are marked in the user manual with the signal words CAUTION and WARNING in combination with a colour coding in yellow and orange:



CAUTION

- Warning of a hazardous situation with a **low** level of risk.
- The warning indicates the type and source of the hazard. If you do not follow the handling instructions listed here, the hazardous situation can lead to minor to moderate injuries.
- Specific instructions for avoiding the hazardous situation.



WARNING

- Warning of a hazardous situation with a **medium** level of risk.
- The warning indicates the type and source of the hazard. If you do not follow the instructions given here, the hazardous situation could result in death or serious injury.
- Specific instructions for avoiding the hazardous situation.

VI Specific Safety Instructions

Intended use

HyQuant is a hydrographic sensor that uses radar technology for contactless measurement of either water stage or water surface velocity or both. Do not use the sensor for other applications. At all times respect the specifications for use, deployment, maintenance, repair and disposal described in the present manual. HyQuant must not be used in areas where there is a risk of explosion!



WARNING

- Risk of explosion due to sparking and electrostatic charging - not intrinsically safe.
 - Operation of the HyQuant in such an atmosphere may result in ignition of the atmosphere, which could cause serious damage to property and injury to personnel.
 - HyQuant must not be operated in a potentially explosive atmosphere. Furthermore, the HyQuant does not have ATEX approval (explosion protection).
- Whether you are installing or deploying the sensor, please note and follow the detailed safety information provided for each work step.
 - Working on electrical systems requires special knowledge and training. For this reason, the electrical installation of the HyQuant may only be carried out by a suitably trained specialist.
 - Electrical, technical and climatic specifications must be respected at all times.
 - Modifications or retrofitting to the HyQuant will void the warranty and the RF approval required for safe operation of the device.
 - Comply with electrical safety standards.
 - Comply with Health, Safety & Environment regulations and directives.



WARNING

Risk of drowning.

- Be particularly careful when working over or near to water.
- Wear a life jacket/buoyancy aid:
 - Ensure that workers at risk of falling into the water are provided with and wear a life jacket or buoyancy aid.
 - The life jacket should be thoroughly checked by the user prior to use.
- Never work alone: Always be accompanied when working near or over water.

1 Introduction

Thank you for choosing our product. We hope you will enjoy using the device.

KISTERS manufactures, sells, installs and operates quality instrumentation, data loggers and communication technology. Products are designed with passion for environmental monitoring and with a deep understanding of the quality, accuracy and robustness needed to fulfil the requirements of measurement practitioners in the field.

The present User Manual will help you understand, install and deploy the device. If, however, you feel that a particular information is missing, incomplete or confusing, please do not hesitate to contact us for further support!

HyQuant is a hydrographic sensor that uses radar technology for contactless measurement of water stage (model HyQuant L) and water surface velocity (model HyQuant V) or both (model HyQuant L+V, which can be expanded to HyQuant Q for discharge measurement). Radar sensors are characterised by long-term stability and low maintenance. HyQuant has been designed to ensure stable system behaviour and stable signals in all weather conditions and for all types of natural or polluted water.

For more information, see the following subsections:

- [KISTERS HyQuant Sensors](#)

1.1 KISTERS HyQuant Sensors

All HyQuant models have been awarded the CE mark, and have received FCC and UL approval. Consequently, they are suitable for deployment in the respective target markets.



Figure 1 – HyQuant Sensor with standard mounting bracket and sensor cable

HyQuant models are equipped with:

- A 61 GHz radar module
- HyQuant L: One antenna pair for level measurement
- HyQuant V: One antenna pair for surface velocity measurement
- HyQuant L+V and Q: Two antenna pairs, one for level and one for velocity measurement
- Wi-Fi interface for local configuration

- Digital data output via either SDI-12 or Modbus (RS-485)
- Aluminium die-cast housing with HDPE lid/radome
- M12 8-pin male sensor/actuator connector
- A gyroscope to determine the angular position during installation

For more information, see the following subsections:

- [Types of HyQuant Sensors](#)^[12]
- [Why RADAR technology?](#)^[12]
- [HyQuant Components](#)^[13]

1.1.1 Types of HyQuant Sensors

HyQuant L – Level or Stage Sensor

The distance between the antenna edge of the sensor and the surface of the medium is the measured variable for this system, with the antenna edge acting as the measurement reference plane. When properly configured, the sensor will output the absolute water level calculated with respect to a user defined reference datum.

HyQuant L is available in two measuring ranges:

- HyQuant L20: up to 20 m
- HyQuant L50: up to 50 m

Radar levels are used for non-contact level measurement in surface water. A distance measurement is made based on the time it takes for electromagnetic waves (microwaves) to travel from the sensor to the water surface and back. As the radar sensor measures the distance between the sensor and the water level, different modes are available for referencing the water level, e.g. to a staff gauge.

HyQuant V – Surface Velocity Sensor

The measured variable is the flow velocity of the water at the surface of the stream/river/brook.

HyQuant V is available for installation heights of up to 20 m above the lowest expected water level.

The sensor is based on the Doppler frequency shift principle for surface velocity measurement. The sensor emits a microwave radar signal at a specific frequency. This signal is reflected when it hits the water surface. The reflected electromagnetic wave oscillates at a shifted frequency. The observed frequency shift is proportional to the surface flow velocity. The sensor samples at high speed and evaluates all the reflected signals collected to determine the surface flow velocity.

HyQuant L+V – Combined Water Level/Stage and Surface velocity Sensor

HyQuant L+V is available for installation heights up to 20 m at the lowest expected water level. This model combines the features of the **L** and **V** models in a single unit of the same size.

HyQuant Q – Radar sensor for discharge monitoring

HyQuant Q is available for installation heights up to 20 m at the lowest expected water level. HyQuant Q is an **L+V** with additional, fully integrated discharge calculation capabilities.

1.1.2 Why RADAR technology?

HyQuant uses RADAR technology because it provides stable, reliable and highly accurate non-contact quantification of water levels in a variety of ecological and natural contexts. The scanning frequency allows adequate detection of dynamic features, including ripples on the water surface.

Radar water level measurement offers a major advantage over other measurement systems because radar technology is largely independent of the properties of the medium being measured, such as:

- Temperature
- Viscosity
- Density
- Conductivity

Radar sensors are also unaffected by daylight, fog and light rain.

Heavy rainfall is known to affect radar measurements because it is difficult to distinguish reflections from thick droplets from those from the water surface. In addition, kinetic energy causes concentric waves to form on the water surface, further complicating the measurement process. To mitigate these effects, HyQuant V, L+ V and Q are equipped with tailor-made filters.

HyQuant is a microwave based sensor. Radar beams follow the wave theory. The beam angle indicates the width of the beam opening from the antenna. The beam angle increases with distance. Ensure that HyQuant radar sensors have an unobstructed vertical view of the water surface: There should be no obstructions in the beam path from the antenna to the water surface. See section [Radar Beams](#)^[33] for more information on measuring the beam spread.

The sensor is supplied with a mounting bracket and has a low profile. HyQuant sensors are easy to install and require minimal maintenance.

1.1.3 HyQuant Components

The basic components of the actual HyQuant unit are illustrated in this chapter. [Figure 2](#)^[13] shows the exact position of each component.

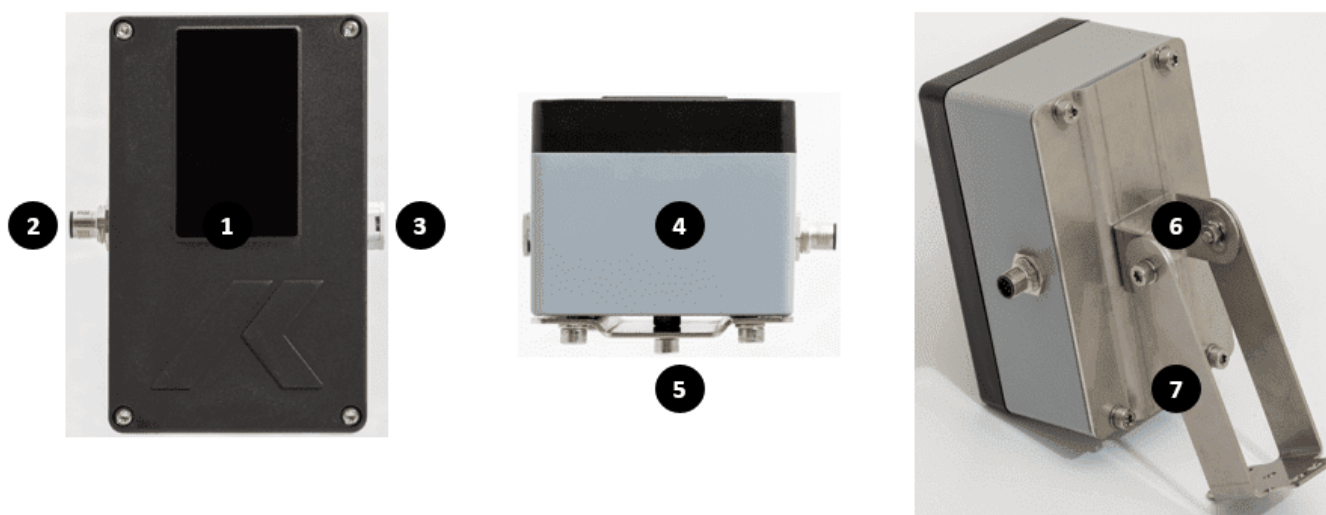


Figure 2 – HyQuant front and side view

HyQuant is a small, self-contained device that exchanges measurement data with external devices (data loggers, RTUs, etc.) via a cable connection and either SDI-12 or Modbus protocol.

No.	Description
①	Lid with integrated radome
②	M12 8-pin connector for signal cable (supplied)
③	Pressure compensating gland
④	Die-cast aluminium housing
⑤	Rear mounting plate
⑥	U-bracket
⑦	Mounting bracket

Table 1 – List of HyQuant Components

2 Installation

HyQuant is always supplied with a mounting bracket and a sensor/actuator cable with one end terminated with an M12 8-pin female connector (HyQuant side) and one end with open wires. **Note** that optional items such as longer cables and a pole mount bracket are available and can be ordered separately.

Note: Before installation, please check that all components are included according to Scope of Delivery and that they have not been damaged during transport.

HyQuant Dimensions

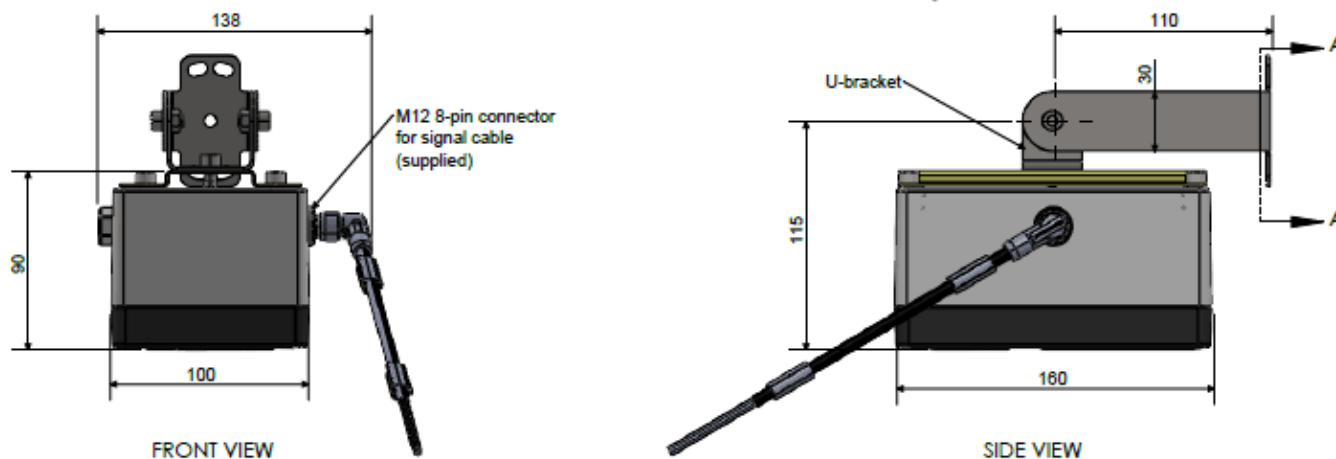


Figure 3 – Device dimensions for HyQuant - all metrics in mm

For more information, see the following subsections:

- [Site Selection Criteria for L and V](#) ¹⁴
- [Orientation of the HyQuant](#) ¹⁵
- [Standard Installation Bracket](#) ¹⁷
- [Optional Bracket for Round Tubes](#) ¹⁸
- [Power Supply](#) ¹⁸
- [Cable and Connector Pinout](#) ¹⁸

2.1 Site Selection Criteria for L and V

To ensure accurate measurements, careful consideration must be given to selecting suitable installation locations for water level (L) and/or flow velocity (V) sensors. HyQuant sensors are designed for use in hydrological applications. HyQuant sensors can be deployed in waterways, rivers, streams, brooks, lakes, reservoirs and similar bodies of water.



WARNING

- Risk of explosion due to sparking and electrostatic charging - not intrinsically safe.
 - Operation of the HyQuant in such an atmosphere may result in ignition of the atmosphere, which could cause serious damage to property and injury to personnel.
 - HyQuant must not be operated in a potentially explosive atmosphere. Furthermore, the HyQuant does not have ATEX approval (explosion protection).
- **Alignment:** Ensure accurate alignment of the sensor in the Y and Z directions ($< \pm 2^\circ$ deviation) using the built-in tilt sensor.
 - **Suitable locations:** Consider potential installation locations such as bridge structures, pontoons, or auxiliary constructions directly above the section of the waterway to be measured.
 - **Exception for steel bridges:** It is advisable to avoid mounting sensors on steel bridges in the middle between two supporting poles/structures. Solar radiation can cause steel bridges to heat up, expand and sag, affecting the measured distance and therefore the hydrological water level. Steel can also be more reflective than other construction materials, so care must be taken.

- **Stability and vibration:** Choose a stable, vibration-free location to avoid interference from traffic or wind.
- **Avoid bridge piers:** Avoid flow velocity effects, backwater zones and turbulence by avoiding installation directly on or near bridge piers.
- **Height placement:** Mount sensors above typical high water marks to prevent antenna immersion and ensure accurate readings. Maintain a minimum distance of 0.15 metres (5.9 inches) between the sensor and the water surface.
- **Water surface conditions:**
 - For L measurements: Optimum water surface characteristics include a smooth surface within the circular measurement area.
 - For V measurements: Ensure a minimum water surface roughness of 2 mm around the sensor radar footprint.
 - For all parameters: Avoid areas with turbulent water surfaces, foam accumulation, obstructions causing changes in water level or flow velocity, ice or snow-covered surfaces, and protruding obstructions.
- **Wind Influence on V measurements:** Minimise wind effects on the water surface (such as inverse flows or side-flows resulting from cross-winds) to maintain measurement accuracy.
- **Clearance:** Ensure that the radar footprint of the sensor is clear of obstructions, with no inflows, outlets, weirs or other obstacles in front of the measurement point. Optimum minimum clearance: 10 times the width of the waterway.
- **Bottom stability:** Choose stable channel bottoms and cross sections free of large rocks and vegetation to avoid measurement inaccuracies.
- **Avoid areas with variable bed load:** Contactless measurement technologies require a stable riverbed, especially for determining flow velocities. In areas with variable bed load, heavy rainfall can alter the riverbed, potentially changing the direction of the flow and causing unpredictable variations in velocity. In extreme cases, the flow may shift entirely outside the sensor's measurement field, resulting in inaccurate or invalid readings.

By carefully following these criteria, suitable installation locations can be identified to ensure accurate and reliable water level and flow velocity measurements.

2.2 Orientation of the HyQuant

The enclosure is made of a grey aluminium die-cast housing with a black HDPE lid. The radome is located on the smooth raised surface of the lid. HDPE has a dielectric constant that makes it virtually transparent for electromagnetic microwaves. The lid with the integrated radome protects the radar antennas from weather and mechanical shock. The [KISTERS 'K' 16](#) is located just below the radome.

For HyQuant V, L+V and Q:

Sensor Alignment and Flow Direction Interpretation

The flow sensor provides a positive flow velocity reading when the 'K' marking on the sensor lid is facing upstream (water flows from 'K' marking to the radome area of the lid). This is the manufacturer's recommended installation.

If the sensor is installed with the 'K' marking on the sensor lid facing downstream, the system will interpret this as a negative flow velocity.

This means:

- **Positive value** when 'K' marking on sensor lid faces upstream.
- **Negative value** when 'K' marking on sensor lid faces downstream.

Return Flows or Flow Reversals

If the sensor is installed correctly (with the 'K' marking on sensor lid faces upstream) and the flow direction reverses (due to return flows or unstable conditions, such as moving bed load), the system will display a negative flow velocity, indicating the change in direction.

Note: If the rain filter is activated, this interpretation of the flow direction no longer applies, as the rain filter modifies how the flow data is evaluated.

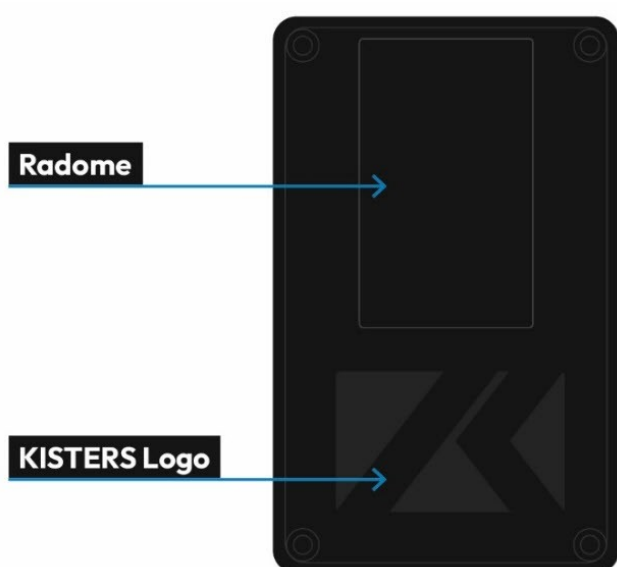


Figure 4 – Position of both the radome and the KISTERS 'K' on the lid

HyQuant assumes that it is positioned parallel to the water surface. During installation, the gyro data helps the installer find the best position relative to the water surface. HyComm, the KISTERS sensor configuration software, displays the mounting angle on a mobile device connected to the sensor via Wi-Fi.

HyQuant sensors must be installed parallel to the water surface (acceptable tolerance: $\pm 2^\circ$) to ensure:

- proper orientation of the level beam, which points straight downwards at 0° ,
- proper orientation of the velocity beam, which points sideways at a 45° inclination.

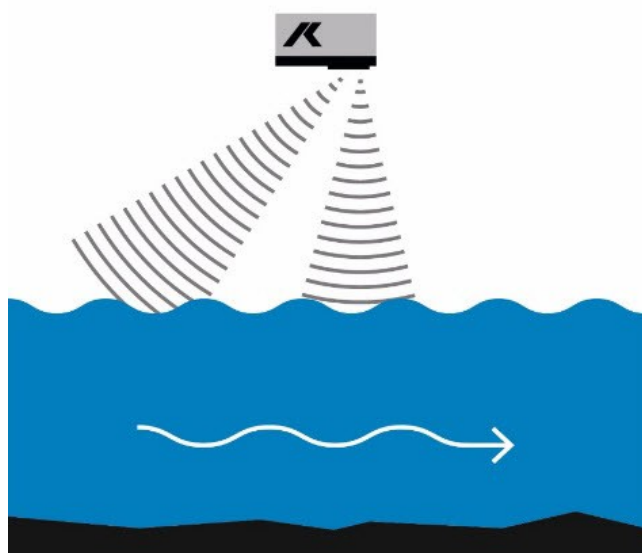


Figure 5 – Orientation of the HyQuant sensor relative to the flow direction (arrow)

2.3 Standard Installation Bracket



WARNING

Risk of pinching.

- Fingers are exposed to pinch points when installing a HyQuant device with bolts.
- Take precautions and wear protective gloves.

The mounting bracket is included in the foam insert base of the standard shipping box. It consists of two parts:

- a small U-shaped bracket for mounting against the base plate of the HyQuant sensor, and
- a long U-shaped arm with mounting lugs.



Figure 6 – Rear side view of HyQuant with mounting bracket installed

The mounting lugs and corresponding holes are designed to accept M6 screws. The standard mounting bracket is compatible with any support that provides a flat surface, including:

- Rectangular metal tubes with a minimum width of 30 mm.
- Concrete surfaces: walls, bridge support structure, ...

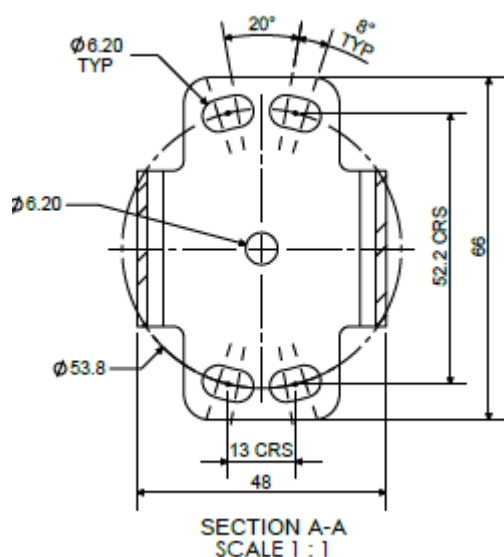


Figure 6 – Foot of the mounting bracket: Dimensions and mounting hole positioning

2.4 Optional Bracket for Round Tubes

The sensor's optional cylindrical pole mount is available as a peripheral and must be purchased separately. It facilitates installation and alignment of the sensor on a pole or tube running parallel to the water surface, with an outer diameter of up to 60.3 mm (2"). The accessory provides a flat mounting sheet for the standard mounting bracket. A clamp bracket is used to mount the sensor on round poles with diameters ranging from 1.5" to 2" (60 cm outer diameter).

2.5 Power Supply



CAUTION

- Device Operating on low DC power.
- No life or health risk except for vulnerable or highly sensitive individuals who should refrain from working with electrical devices.
- Precaution: Electrical devices should always be installed by qualified personnel.

The HyQuant operates within a voltage range of 9 to 30 V DC, with a nominal operating voltage of 12 V DC, which is typical for SLA batteries (Sealed lead acid battery) - a rechargeable battery suitable for solar-powered applications. It can also be connected to a DC mains power supply.

As soon as a suitable power supply is connected, the HyQuant is ready for use.

2.6 Cable and Connector Pinout

HyQuant sensors are supplied with a suitable 10 m sensor/actuator cable with an 8-pin M12 female connector at one end and open wires at the other end. The HyQuant enclosure is equipped with an 8-pin M12 male connector. The cable connector should be plugged into the housing receptacle.

Note: The connector only fits in one direction due to the coding.


**WARNING**

- Incorrect connection of the supply power may result in damage to the HyQuant.
- The HyQuant has a reverse polarity protected interface and power circuit to protect against this. However, it is important to note that an improper or incorrect connection between the power and interface lines could still result in damage to the instrument.
- Check the pin-out configuration and ensure that no power is applied to the connector cables other than those specifically marked 'Power VCC +' and 'Power GND -'.


Cable and connector pinout

1	2	3	4	5	6	7	8
Power VCC +	Power GND -	SDI-12 GND	SDI-12 Data	RS485A	RS485B	NC	NC

Pin assignment (female view)

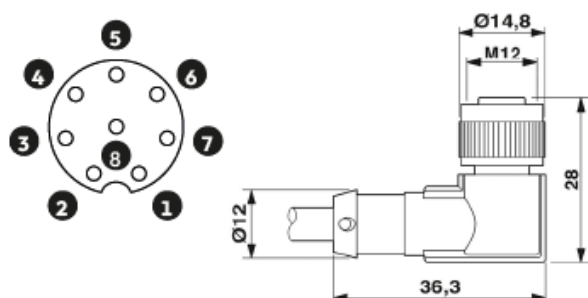

Connection diagram

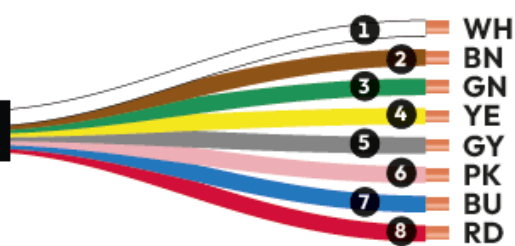

⚠ Caution: Incorrect or faulty connection can damage the device. All interface and power cables are protected against reverse polarity, but incorrect connection of power cables to interface cables can damage the device.

Table 2 - Connector Pinout

3 Configuration

HyQuant is equipped with an integrated Wi-Fi hotspot and can be locally configured/operated wirelessly from a PC/Notebook with activated Wi-Fi via KISTERS' HyComm software. The Wi-Fi hotspot is protected against unauthorised access from outside. This makes it impossible to read measurements or status values or change device settings via this interface without authentication. The Wi-Fi hotspot must be activated as described below.

For more information, see the following subsections:

- [Configuration Software](#) 
- [Enabling of the Local Wi-Fi Hotspot for Configuration](#) 
- [Filters](#) 
- [Rain Filter for Velocity Measurements](#) 
- [Reference Level](#) 
- [Operational Range](#) 
- [Configuration for Q Calculation](#) 
- [Settings](#) 

3.1 Configuration Software

HyComm is KISTERS software used for local communication between a Windows computer and the HyQuant radar sensor. Communication is via a Wi-Fi connection, with the HyQuant acting as a Wi-Fi hotspot. HyComm allows [parameter configuration](#)  of the sensor. You can find more information about HyComm in a [separate manual](#) that can be downloaded from the [HyComm product page](#).

To protect the parameterisation, you can protect the device with a keyword of your choice.

3.1.1 System Requirements

Make sure your PC/laptop/tablet computer meets the following system requirements:

- Operating system: Windows 10 or later
- Wireless connection: Wi-Fi / adapter: enabled
- Wired connection: SDI-12 to USB interface or RS-485 to USB interface (for Modbus interface)

Note: The interfaces can be ordered from KISTERS as an optional extra.

3.1.2 HyComm Updates

When HyComm starts with Internet access, it automatically checks for a new release. If an update is available, it will be downloaded and the message shown in [Figure 6](#)  will be displayed:

New Update Available
×

Version: 6.0.1

Release Date: 2025-02-18

Release Notes:

Fixes

- HyQuant: fixed live data values

Please restart to install the update.

[**RESTART**](#)

Figure 7 – HyComm Update Alert Message

Note: Windows notification settings may suppress this notification.

The update is installed in the background after HyComm is closed. This process typically takes between 20 seconds and one minute, depending on the system. For manual updates, the download link on our website will always point to the latest version.

3.1.3 Firmware Updates

HyQuant firmware updates are automatically detected and downloaded to the local drive each time HyComm is started. This feature effectively allows users to be equipped with the latest firmware version when visiting sites with limited or no network coverage. When a new firmware update is available, it is instantly downloaded for offline use. All that is required is an Internet connection, not a connection to a device.

When connecting to a device with outdated firmware, you are notified of the firmware update and can choose to install the update.

Note: It is strongly recommended that the latest version of HyComm is installed before proceeding with a firmware update.

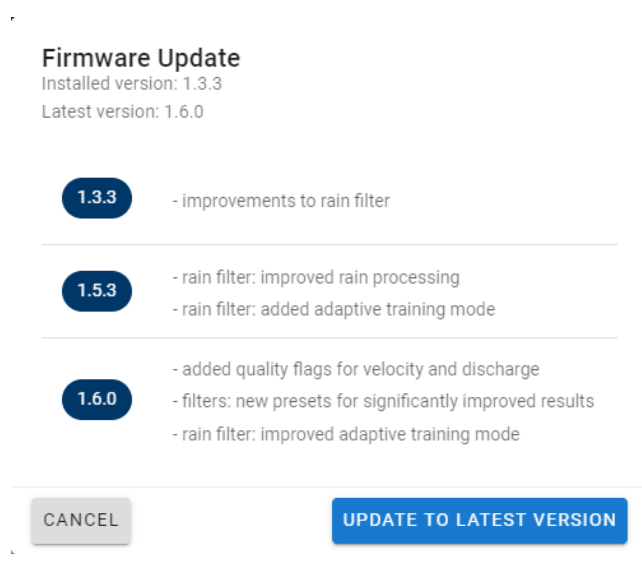


Figure 8 – HyComm for HyQuant Firmware Update

3.2 Enabling of the Local Wi-Fi Hotspot for Configuration

The local Wi-Fi hotspot can be enabled using one of the following activation methods:

- [Enable with Reed Switch / Magnet](#) 
- [Enable via Modbus](#) 
- [Enable via SDI-12](#) 
- [Enable via Power Cycle](#) 

Once the hotspot has been enabled, a beep sounds to indicate that it is starting, regardless of the activation method used. The Wi-Fi hotspot may take up to 60 seconds after the beep to become available.

- Click the Wi-Fi icon in your computer's taskbar.
- From the list of available networks, select the Wi-Fi access point named **HERVYXXXX**, where **HERVYXXXX** is the serial number of the HyQuant Edge device.
- Wait until the computer has connected to the Wi-Fi hotspot.
- Start HyComm to communicate with the device.
- When prompted, enter the initial password printed on the Factory Acceptance Test (FAT) document supplied with the device. This password is unique to the device.

For security reasons, change the initial password to a secure password of your choice.

Note: It is strongly recommended to change the password using HyComm to prevent others from changing the sensor configuration.

After that you connect your HyQuant to the local Wi-Fi hotspot.

3.2.1 Enable with Reed Switch/Magnet

The HyQuant contains a reed switch which is actuated by moving a magnet in the immediate vicinity of the reed switch. The position of the reed switch integrated in the HyQuant housing is shown in [Figure 8](#) ²². It is necessary to place the magnet directly on the housing.



WARNING

Risk of falling when activating the Wi-Fi hotspot.

If the HyQuant is installed at a great height above the water and/or the sensor is difficult to access, there is a risk of falling when activating the Wi-Fi hotspot.

- Use personal protective equipment (PPE) to prevent falls.
- If possible, use a swivelling bracket for installation. This allows you to swivel the sensor into a safe working area for configuration.



Figure 9 – HyQuant lid with indication of the reed-switch position

3.2.2 Enable via Modbus

To enable the local Wi-Fi of the HyQuant device, write '1' to holding register (FC06) 401.

See [Modbus Register Mapping](#) ⁴⁵.

3.2.3 Enable via SDI-12

To enable the local Wi-Fi of the HyQuant device, use the following SDI-12 extended command:

```
aXWIFI!
```

See [Extended Commands](#) ⁴⁴.

3.2.4 Enable via Power Cycle

HyQuant automatically turns on its Wi-Fi hotspot when it is powered on. This allows to simply disconnect and reconnect the power supply to activate the Wi-Fi hotspot.

Note: If the sensor is connected to SDI-12 and the logger is configured to switch off the HyQuant between measurements, this feature should be disabled using HyComm. Otherwise the Wi-Fi hotspot will be activated every time the logger reads a value,

which can increase power consumption. HyComm Navigation path: **CONNECTION** > **WI-FI** deactivate **START WI-FI WHEN SENSOR IS POWERED ON**.

3.2.5 Automatic Disabling

When HyQuant is running the Wi-Fi hotspot, the power consumption is significantly higher than normal. To keep power consumption down, the hotspot is automatically deactivated after 5 minutes of inactivity. The hotspot is considered inactive as long as HyComm is not connected. As long as HyComm is connected, the Wi-Fi hotspot is not turned off.

3.3 Filters

Removing Unwanted Reflections/Outliers

Objects in close proximity to the sensor, particularly sharp metal or concrete edges, can cause unwanted reflections. Normally, the radar will detect the water surface as the most prominent reflection. However, occasionally a false reflection can be stronger.

By comparing new readings with the average of recent values, the radar sensor can identify false signals and reject them using a configurable threshold. This setting is automatically adjusted when one of the adjustable filters is selected.

User Adjustable Filters

In the KISTERS HyComm software you can choose from a total of three different filter presets. Each of them reflects digital filter settings for a typical water flow situation as found in real open channel flows.

- The filter settings are designed to remove false signals. The more turbulent the water surface, the longer the filter. Therefore, (recent) historical data will have a greater influence on the evaluation of current readings. The effect is that the correct values are correctly identified, the overall trend is not altered by the filter and no significant and real changes are missed.
- The purpose of the filter presets, with a user adjustable "strength", is to remove the "noise" caused by a turbulent surface to give a smooth measurement curve. HyComm allows to change the filter "strength" and observe the effect on the distance value in real time.

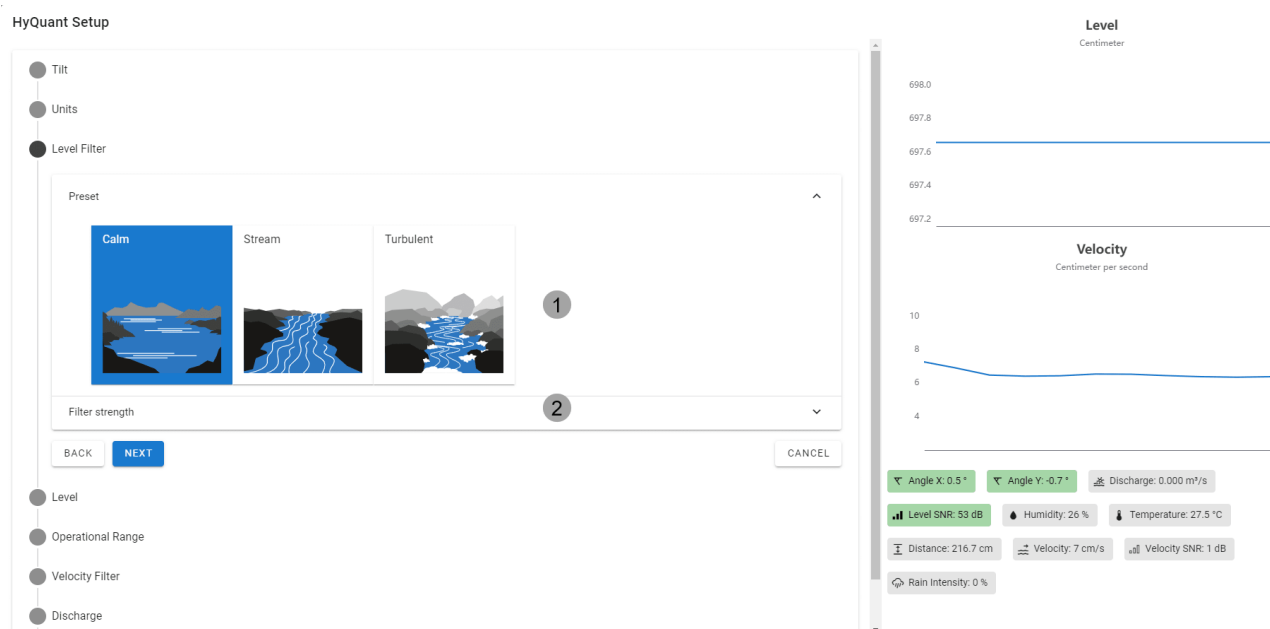


Figure 10 – Level Filter: Dialogue to select filter preset and filter strength

- One of the main advantages of the HyQuant filter settings in HyComm is that they prevent you from having to enter complex digital filter parameters.

Site Conditions (Filter Type)	Description	Example
Calm	A calm body of water is a contained body of freshwater with no or very low flow velocity, but subject to some surface turbulence depending on wind conditions.	Lake, reservoir, pond, rainwater retention basin, ...
Stream	Refers to an uninterrupted expanse of water flowing along a channel (or open canal) confined by its bed and banks.	River, waterway, brook, creek, tributary, open canal, open channel, etc.
Turbulent	A turbulent, continuously or intermittently flowing stream whose discharge varies greatly over short periods due to thunderstorms or snowmelt.	Torrent, natural mountain streams/brooks/creeks, whitewater, ...

Table 3 – HyQuant L: Filters

3.4 Rain Filter for Velocity Measurements

Concept

When using HyQuant in the field, it's crucial to consider the effects of the weather, especially rain, when measuring in slow-moving water.

For accurate surface velocity readings in rainy conditions, especially in low-flow scenarios, corrections or adjustments may be needed. Non-contact sensors such as the HyQuant measure the surface velocity, not the velocity within the water column. To do so, HyQuant detects surface ripples or waves larger than or equal to 3 mm in height. In calm conditions (no wind, no rain), the surface velocity is closely related to the mean flow velocity by a calibration factor known as the k -factor.

Rain alters the surface of the water by creating different interference patterns due to:

- High velocity raindrops hitting the water surface.
- Circular waves propagating from each raindrop impact, each with its own specific velocity.

These disturbances create additional surface velocities that a surface radar can detect, leading to potential inaccuracies.

Velocity dependence of the influence of rain:

- The impact of rain is more pronounced in water bodies with low flow speeds.
- For velocities below 1.5 m/s, rain-induced ripples can significantly distort surface velocity readings.
- For velocities above 1.5 m/s, the influence of rain becomes negligible, as the surface waves generated by the flow dominate over the rain-induced disturbances.

Prerequisites

- Firmware version: 1.6.0 or later.
- Update to the latest version of HyComm before installing new firmware.
- The Rain Filter options - **REAL TIME FILTER** and **ADAPTIVE TRAINING MODE** - must be enabled in the HyComm software.

Rain Filter

i Rain filtering requires the sensor to measure against the flow direction. ?

The Rain Filter feature enhances measurement accuracy during rain events by mitigating the impact of rain on surface velocity readings. It offers two powerful stages.

Real Time Filter

Actively removes rain interference during measurements for instant, reliable results.

☒ Enabled

Adaptive Training Mode

i This filter requires continuous power to the sensor for proper operation and is not compatible with SDI-12 intermittent power mode.

Learns velocity patterns under normal conditions and applies this trained reference during rain events, ensuring consistent performance.

☒ Enabled

SMART SURFACE VELOCITY PROFILE ▾

Figure 11 – HyComm Settings for Rain Filter

3.4.1 Rain Filtering Principle in HyQuant

The HyQuant device incorporates a two-stage rain filtering system designed to ensure reliable surface velocity measurements, even during rain. Below, you can find an overview of how it works and its key components.

Note: Rain filtering is only effective when the sensor is facing upstream (against the water flow).

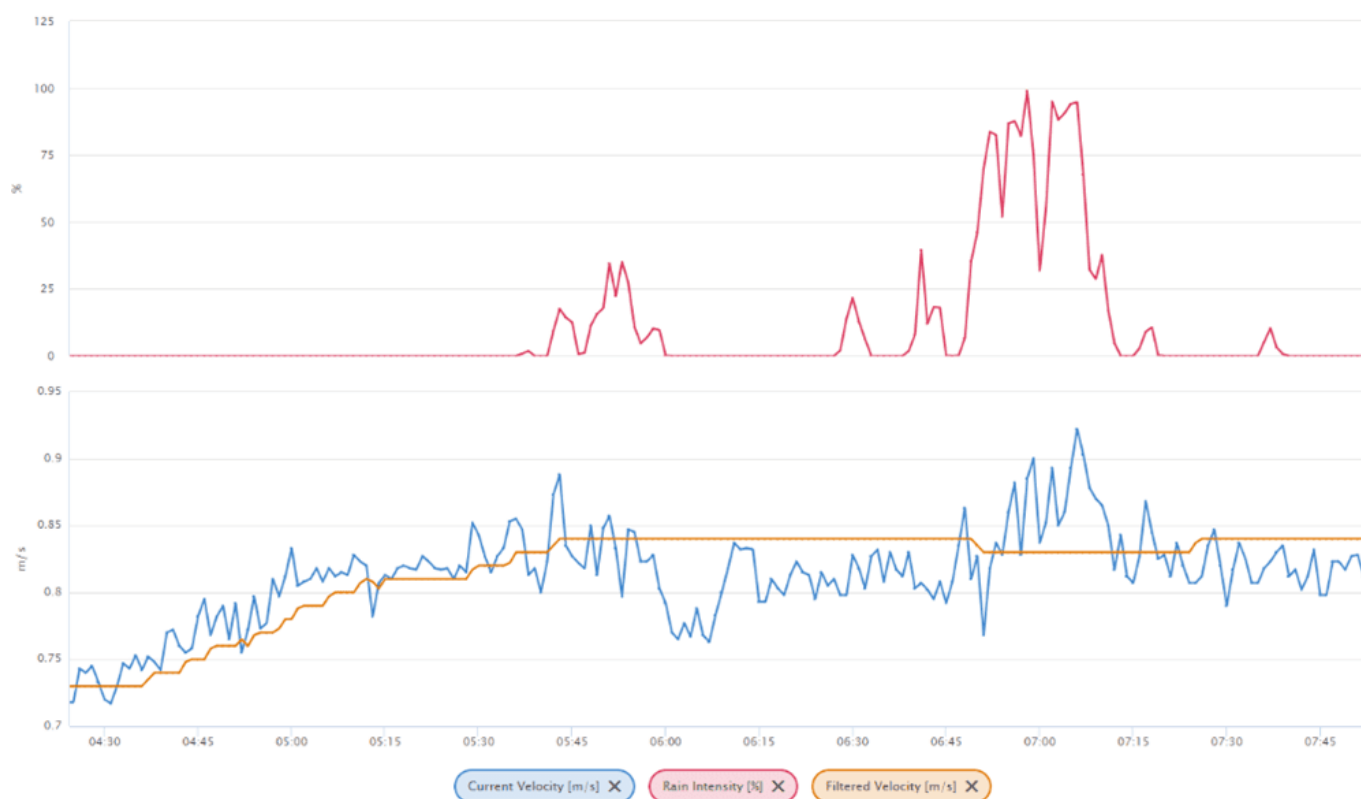


Figure 12 – Velocity measurement during a rain event

- Red graph: Rain intensity in percent.
- Blue graph: Unfiltered velocity. During rainfall, the surface velocity is disturbed by the rain.
- Orange graph: The filtered velocity uses the Smart Surface Velocity Profile to ensure a reliable velocity reading even during rain events.

Rain Intensity

The HyQuant can reliably detect rain and measure its intensity, and this data can be accessed via SDI-12 and Modbus interfaces.

Note: Rain intensity percentages may not be mistaken for rainfall quantity!

Two-Stage Rain Filtering System

The filter can be configured in HyComm. The settings are part of the velocity filter settings. See [Figure 12](#).

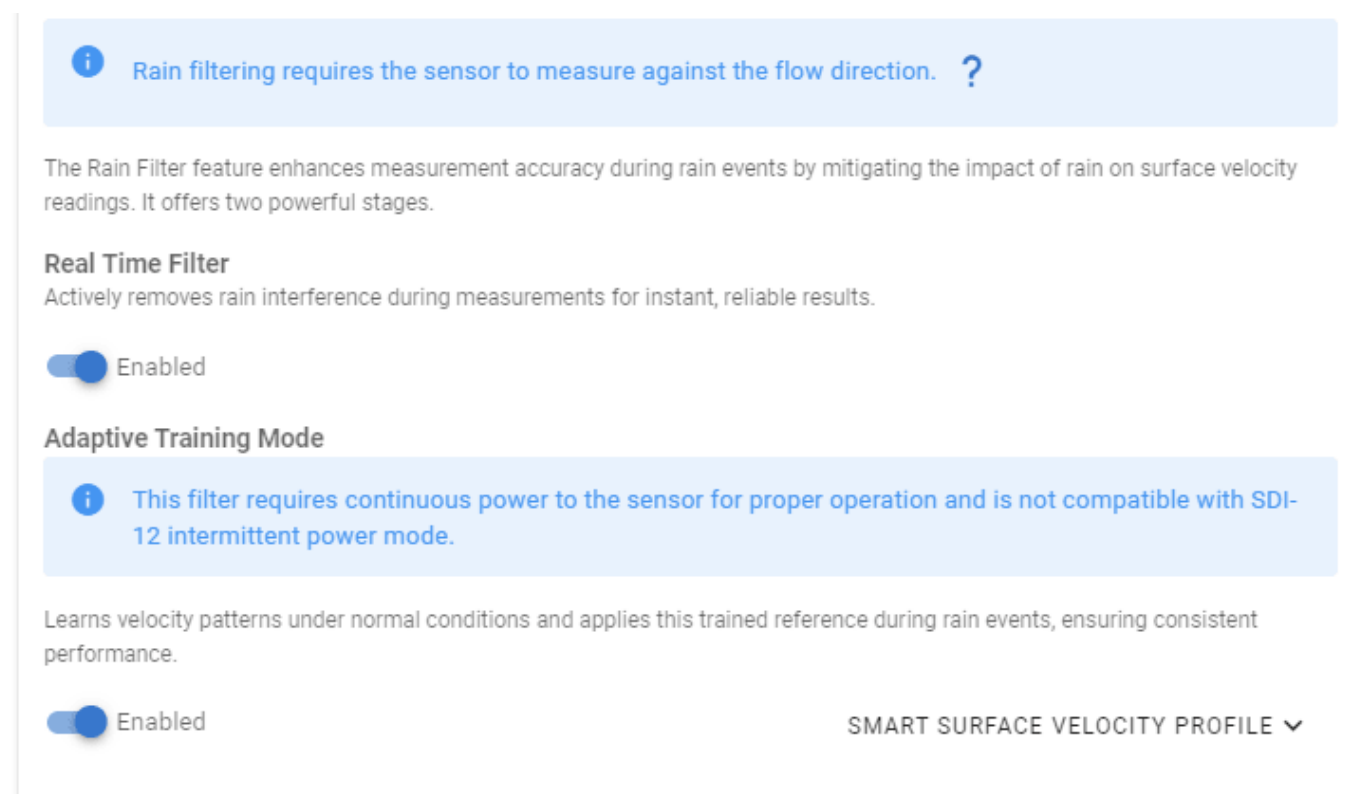


Figure 13 – HyComm – Enabling the Rain Filter and the Adaptive Training mode

Stage 1: Real-time filtering (immediate compensation)

Filters out rain-induced disturbances on the fly by removing interference caused by rain components detected by the radar.

Performance factors:

- Works best with higher water velocities and low rain intensity.
- Less effective in low flow conditions with heavy rain, where variations may still occur.

Stage 2: Adaptive training mode (long-term compensation)

Note: Adaptive training requires continuous monitoring, so it won't work if the sensor is powered intermittently (e.g. for SDI-12-only readings).

The Smart Surface Velocity Profile in Stage 2 represents a sophisticated method of improving the accuracy of water monitoring by developing a site-specific correlation between water level and surface velocity.

Key aspects:

- **Learning over time:** This feature builds a dynamic relationship between water level and surface velocity specific to the installation site, assuming a constant cross-sectional profile. The system improves its accuracy as it collects more data and adapts to the unique characteristics of the water body.
- **Rainfall adaptation:** During rainfall, pre-learned profiles are used to adjust surface velocity readings, ensuring reliable measurements despite environmental variations.
- **Installation dependency:** The profile is specific to the location of the sensor. Changing the installation, such as moving the sensor, will invalidate the existing profile. In such cases you must discard the current profile using the velocity filter settings in HyComm.

- **Device replacement:** If a HyQuant instrument is replaced, the Smart Surface Velocity Profile can be saved and restored on the new instrument, maintaining continuity and reducing setup time.

Note: The real-time filter is mandatory and is automatically activated when adaptive training mode is enabled.

3.5 Reference Level

The primary measurand of a radar level sensor is the distance between the antenna and the water surface. This distance must be converted into a level reading for hydrological purposes. To obtain a level reading, the sensor must be referenced to a site specific reference level.

Referencing can be:

- Relative to a staff gauge
- Relative to a geodetic datum

The KISTERS HyComm software is used to enter the site specific level reference. HyComm guides you through the process with convenient input screens.

3.6 Operational Range

The operating range definition allows to restrict or limit the measurement range.

- **Limit the maximum depth:** This function is particularly useful to avoid false readings, for example during a drought when a stream runs dry. In such a situation, the radar beams will be reflected by any object (e.g. rocks, man-made structures, ...) that happens to be in the detection area.
- **Limit the minimum depth:** this helps you to ignore obstacles in the radar beam in the vicinity of the installation position.

In both cases, the **OPERATIONAL RANGE** setting helps to avoid false readings. All measurements outside the operating range are ignored. HyQuant L returns the user-defined upper or lower limit.

3.7 Configuration for Q Calculation

Only HyQuant Q models can be configured to calculate the discharge Q from the measured surface velocity V , the measured water level L and a correction constant k that relates the surface velocity to the average velocity for a given wet cross section of the stream. The KISTERS HyComm software allows to make the settings. Choose from three available mean velocity calculation methods:

- **Constant k-factor:** k -factors are chosen to reflect the characteristics of the chosen monitoring site. In hydrology, k -factors are essential for understanding the impact of stream conditions on flow. Various studies suggest k -factors based on empirical data. For example, one approach is to use a factor of 0.87 for natural streams, while for engineered channels it may be around 0.95. It is important to refer to specific hydrological studies or guidelines relevant to the geographical area and stream type for precise values.
- **Dynamic k-factor:** This is based on the use of imported k -factors to improve accuracy. The k -factors have been calculated using a power law. This method is more accurate but requires more effort to provide good input data for the power law model.
- **V Index:** It is based on k -factors calculated using statistical methods that model the relationship between measured surface velocities and the mean velocity of a cross section. The method is moderately complex and achieves good accuracy.

Also define a cross section profile: To accurately calculate the discharge (Q) of a stream, a cross-sectional profile of the stream is essential. This profile helps to convert the measured surface velocity into an average velocity across the entire width of the stream.

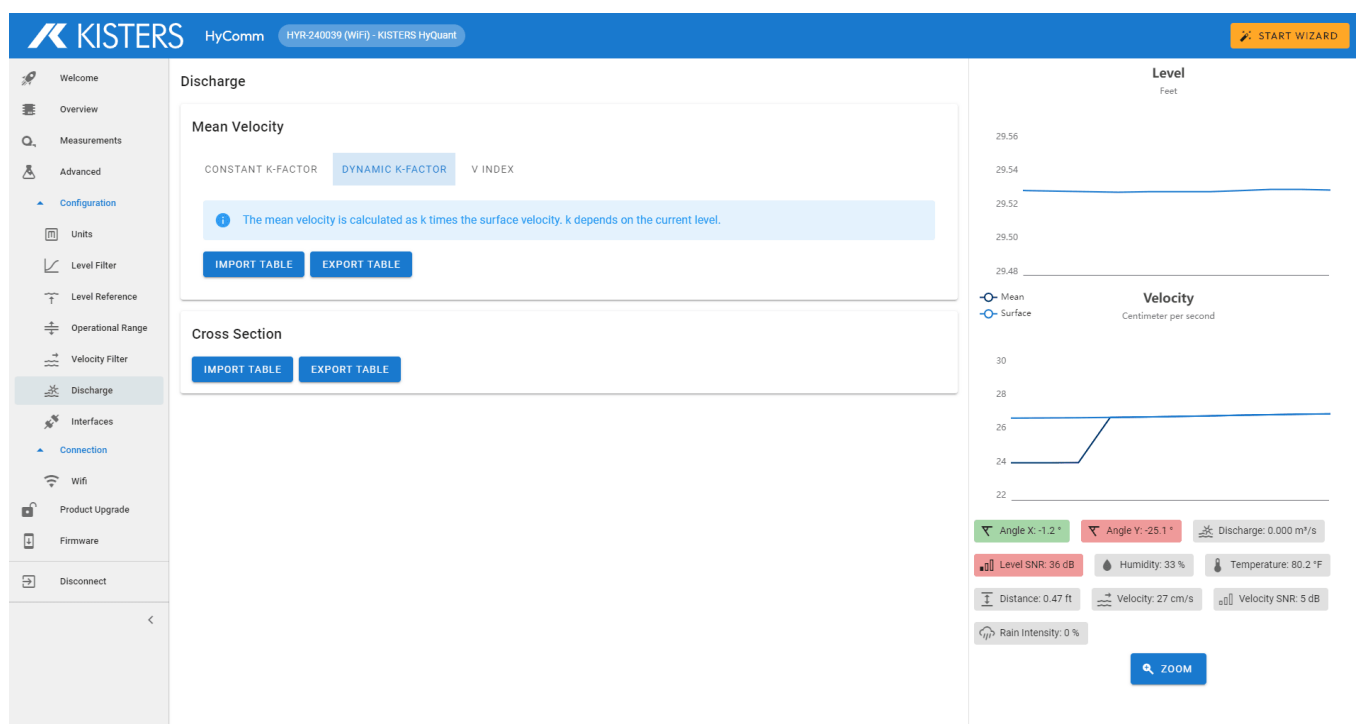


Figure 14 – HyComm Dynamic k-Factor

Format of a suitable k -table:

- The best way to create a table is in Microsoft EXCEL®.
Note: For all tables, only the first two columns are used.
- The table and data values are typically exported from a cross section or rating curve editor or the corresponding module of your hydrological data management software. The KISTERS software solutions WISKI, HYDSTRA and SKED all provide the required functionality.
- Save the data in a CSV UTF-8 (Comma Separated Values) file.

Details can be found in the following PDF document, which can be downloaded from the KISTERS website: [White Paper - Discharge Calculation with HyQuant Q](#)

3.8 Settings

The following settings can be made in the KISTERS HyComm software. For more information on KISTERS HyComm, please refer to the separate user documentation: [HyComm User Manual](#).

The settings are divided into the following subsections:



- [Parameters](#)²⁸⁾
- [Units](#)³²⁾

3.8.1 Parameters

The following operating parameters of the HyQuant L can be set using the KISTERS HyComm configuration software. The navigation path for each parameter is given at the end of the corresponding description.

Item	Description	Default
Units and decimals	Units can be adapted to local / user preferences: see Units ³²⁾ Navigation path: CONFIGURATION > UNITS	Metric units
Filter type (for level and velocity)	Select installation environment (see Table 3 ²⁴⁾) Define filter length (1 - 200 seconds)	Calm: 10 seconds

Item	Description	Default
	Navigation path: CONFIGURATION > LEVEL FILTER	
Interface selection	Available interfaces: - SDI-12 - Modbus Both can be enabled or disabled, but at least one must be enabled. Navigation path: CONFIGURATION > INTERFACES	SDI-12: enabled Modbus: enabled
SDI-12 configuration	Set device address using KISTERS HyComm configuration software or SDI-12 commands. Navigation path: CONFIGURATION > INTERFACES > SDI-12 Note: When SDI-12 is enabled, it is strongly recommended to disable automatic Wifi startup.	Address: 0
Modbus configuration	The following settings can be modified by you: - Address range: 1 - 255 - Parity: Even, Odd, None - Stop bits: 1 or 2 - Baud rate: 9600, 19200, 38400, 57600, 115200 Note: Data bits are always set to 8 and are not configurable. Navigation path: CONFIGURATION > INTERFACES > MODBUS	Address: 1 Baud rate: 9600 Parity: None Stop bits: 1

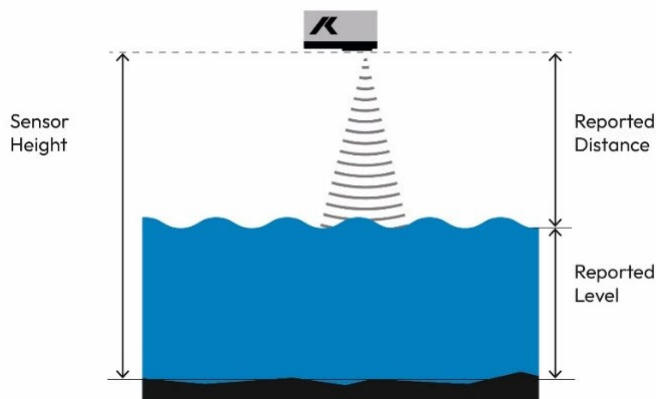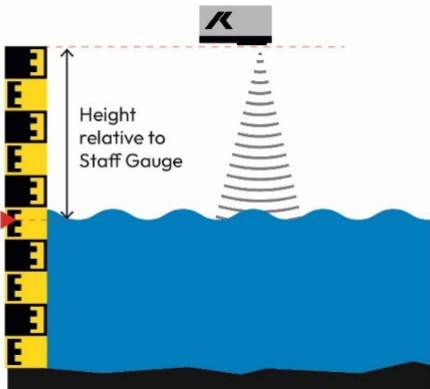Item	Description	Default
Gauge zero reference height	HyQuant L provides a water level reading. The water level is the height of a surface water body above a fixed reference height, known as the gauge zero reference height. The reference height is levelled and may not correspond to the level of the river bed. It must remain stable during the operating time of the water level gauge. By definition, a radar sensor measures the distance between the sensor antenna and the water surface. The absolute water level is then calculated using the following formula: $\text{Absolute water level} = [\text{Gauge zero reference height}] - [\text{Distance}]$ Select one of the following two options to enter the required gauge zero reference height: - Navigation path: CONFIGURATION > LEVEL REFERENCE > KNOWN PARAMETER: SENSOR HEIGHT (above reference level) You can enter the distance between the sensor and the reference level.  - Navigation path: CONFIGURATION > LEVEL REFERENCE > KNOWN PARAMETER: STAFF GAUGE You can enter the staff gauge measurement.  See Reference Level 	Sensor height above reference level defaults to 0, level will be 0 unless set. Reading the staff gauge always returns 0

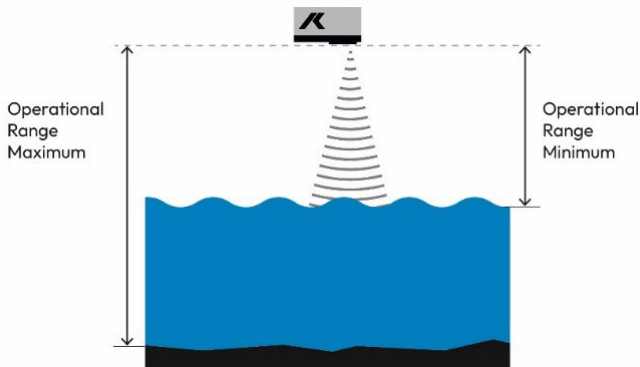
Item	Description	Default
Operating range (level)	The operational range is the range within which the readings recorded by the sensor are valid. A maximum and minimum level can be configured to define the operating range. The operating range is then by definition less than or equal to the measurement range. Values above the fixed maximum are automatically set to the maximum level and those below the minimum are set to the specified minimum level. The quality flag indicates whether or not the values are within the operating range. See Operational Range ²⁷. Navigation path: CONFIGURATION > OPERATIONAL RANGE 	Min: 100 for L20, 150 for L50 [mm] Max: Upper range [mm]
Flow direction	HyQuant detects the direction of flow. When the sensor is installed and aligned as described in chapter Orientation of the HyQuant ¹⁵, with the 'K' marking on the sensor lid facing upstream, the flow velocity is measured as a positive value. If for some reason HyQuant is installed with the 'K' marking on the sensor lid facing downstream, a correction is required and you must change the flow direction setting to negative. Options: positive, negative Navigation path:	positive
Wi-Fi automatically enabled on power up	See chapter Enable via Power Cycle ²². Navigation path: CONNECTION > WIFI	Enable on power up
Wi-Fi password	The password is configurable. For IT security reasons, it is advisable to change the initial password the first time you log in. Note: It should be noted that if you forget the password, you won't be able to change it without returning the device to KISTERS. Navigation path: CONNECTION > WIFI	Individual code printed on the Factory Acceptance Test (FAT) document supplied with the device

Table 4 – Parameters

3.8.2 Units

The units for “filtered/current level value”, “filtered/current distance” and temperature can be set in the “KISTERS HyComm” configuration software under the **CONFIGURATION > UNITS** navigation path. All other units are preset at the factory.

Parameter	Description	Units
Filtered water level	Sensor height above reference point - Filtered distance Lower cut-off is the user-defined minimum level of the operating range, if enabled.	[mm, cm, m, ft, in]
Current level	Sensor height above reference point - Current distance Lower cut-off is the user-defined minimum level of the operating range, if enabled.	
Current distance	Distance measurements taken from HyQuant after removal of outliers and similar spikes. The reference is the HyQuant lid.	
Filtered distance	Current distance filtered with moving average filter. The moving average filter of duration N calculates the average of each consecutive set of N sensor readings. Each reading is weighted equally.	
Level quality Flag	bitfield	./.
Filtered velocity	Surface flow velocity	[mm/s, m/s, mph, km/h, fps, fpm, cm/s]
Current velocity	Surface flow velocity	
Velocity quality flag	bitfield	./.
Discharge	Discharge calculated based on cross-section	[m ³ /s, ft ³ /s, in ³ /s]
Discharge quality flag	bitfield	./.
Supply voltage		[V]
Internal temperature		[°C, °F]
Internal relative humidity		[%]
Angle	Separate for X and Y axis	[°]
Radar SNR	Signal to noise of the current distance measurement.	[dB]

Table 5 - Units

4 Operation

Note: HyQuant starts measuring as soon as the supply voltage is applied.

It should be noted, however, that a radar sensor always requires a correct setting of its operating parameters, in particular the reference to a defined zero point in order to convert distance measurements into hydrological water levels. It is recommended to download HyComm from the KISTERS website and to configure HyQuant without delay.

Depending on the model of HyQuant used, the sensor continuously determines the current water level, the current surface velocity and the current discharge. New data is provided once per second.

A HyQuant sensor determines additional values in parallel with the actual water measurements:

- Internal device temperature
- Internal humidity
- Tilt angle of sensor X axis
- Tilt angle of sensor Y axis
- SNR value of water level measurement
- Water level measurement status indicator

This 'metadata' can be used to assess the quality of a measurement and identify potential sources of error at an early stage. All measurements can be accessed via the SDI-12 or Modbus RTU (RS-485) interface. A detailed description of how to make measurements available via the two interfaces can be found in chapter [SDI-12](#)^[36] and [Modbus](#)^[44].

It is also possible to perform temporary in-situ measurements as a special application. In this case, the HyQuant is connected directly to a PC/laptop via Wi-Fi and no data logger is required. The measured values are then displayed directly in the HyComm configuration software. It is also necessary to observe the criteria for a suitable installation site (see chapter [Site Selection Criteria for L and V](#)^[14]). It is also very important that the sensor is aligned parallel to the water surface.

4.1 Radar Beams



CAUTION

- Radar electromagnetic wave emissions.
- The device operates with very low emitting power radar beams.

Precaution:

- While the risk is minimal, it is advisable to avoid prolonged direct exposure.
- Vulnerable or highly sensitive individuals should exercise caution.
- Always follow standard safety guidelines when handling or installing radar devices.

Radar emits electromagnetic waves. The beam is the focused electromagnetic emission from the radar antenna. The beam is defined by the main lobe. It is accompanied by one or more side lobes.

The main lobe is the area delimited by the beam angle, i.e. the lateral positions where the attenuation reaches approximately -3 dBm.

 

- HyQuant L: The beam angle is defined as 8° (4° on either side of the 0° perpendicular).
- HyQuant V: The beam angle is defined as 8° azimuth by 12° elevation (again divided by the perpendicular).

Sidelobes are clearly identifiable accumulations of electromagnetic waves next to the main lobe. Ideally, sidelobes are completely attenuated, but this is never the case. Depending on the material and the orientation of an obstacle, sidelobes can interfere with the measurement in the main lobe. HyQuant is equipped with special algorithms to filter out these interferences.

The beam angle is defined in degrees. The angle is the total geometric aperture of the beam. The concept is illustrated in [Figure 14](#)^[34]. The beam angle can be used to calculate the beam width at a given distance from the water surface to the sensor antenna.

HyQuant radar antenna – caution: 2 different cases:

- Velocity: beam angle azimuth = 8° , and elevation 12°
- Level: beam angle azimuth = elevation = 8° .

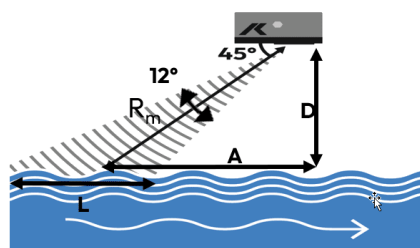

Distance „A“ centre of sensor radar footprint

R_m	distance antenna to midpoint
L	extension in elevation direction
A	$A = D$ with 45° emitting and incident angle

$$W = 2 \times D \times \tan(8^\circ/2)$$

$$R_m = \frac{D}{\sin(45^\circ)}$$

$$L \approx 2R_m \tan(12^\circ/2)$$

Metric				Imperial			
D [m]	W [m]	Rm [m]	L [m]	D [ft]	W [ft]	Rm [ft]	L [ft]
20,0	2,80	28,28	5,95	65,62	19,51	92,80	19,51
15,0	2,10	21,21	4,46	49,21	14,63	69,60	14,63
10,0	1,40	14,14	2,97	32,81	9,75	46,40	9,75
7,0	0,98	9,90	2,08	22,97	6,83	32,48	6,83
5,0	0,70	7,07	1,49	16,40	4,88	23,20	4,88
3,0	0,42	4,24	0,89	9,84	2,93	13,92	2,93
2,0	0,28	2,83	0,59	6,56	1,95	9,28	1,95
1,0	0,14	1,41	0,30	3,28	0,98	4,64	0,98
0,5	0,07	0,71	0,15	1,64	0,49	2,32	0,49

Figure 15 – Beam angle and calculation of equivalent diameter on water surface for distance D

4.2 Quality Flags

Quality flags are accessible via both SDI-12 and Modbus interfaces.

These flags serve as a crucial indicator of the reliability of the velocity readings provided by the HyQuant. While the sensor is engineered to ensure accurate measurements under standard operating conditions, external factors may sometimes affect the quality of the data.

Quality Flag	Bit definition	Description
Level	Bit 0: Level below operating range	
	Bit 1: Level above operating range	
	Bit 2: Level below hardware range	Vertical distance between sensor and water body too high (20 m for L20, V, L+V, Q; 50 m for L50).
	Bit 3: Level above hardware range	Water too close to the sensor
Velocity	Bit 0: Reserved for future use	
	Bit 1: Rain indicator (0: no rain, 1: rain)	Equal to 1 = rain is detected, and subsequently the rain intensity is greater than 0.
	Bit 2: Reading from smart surface velocity profile	Rain is detected and the filtered velocity is calculated using the Smart Surface Velocity Profile.
	Bit 3: Reserved for future use	
	Bit 4: No validated velocity in smart surface velocity profile	Rain is detected but the sensor has not yet been trained for the current condition.
Discharge	Refer to explanations for velocity quality flag	

Table 6 – Quality Flag Definition

How to decode Quality Flags

A bitwise quality flag is a specialised encoding that represents multiple quality indicators within a single binary value. To decode it:

- Convert the flag into its binary form.
- Examine the position of each bit. Each bit corresponds to a specific quality condition (as shown in [Table 6](#) above).
- A bit value of 1 indicates that the condition is active, while 0 indicates that it is not.

This method efficiently represents and interprets multiple quality aspects in a compact format.

Example

```
Velocity Quality Flag = 6
Binary representation = 0000 0110
bit 1 = 1 => Rain indicator indicates rain
bit 2 = 1 => reading from Smart Surface Velocity Profile
```

4.3 SDI-12

Note:

- In order to use the SDI-12 interface, it must be activated via the HyComm software. Navigation path: **CONFIGURATION > INTERFACES > SDI-12**
- The SDI-12 sensor address can also be changed via the HyComm software if required (Navigation path: **CONFIGURATION > INTERFACES > SDI-12**). Factory default setting: "0"
- If the sensor is not permanently powered when using the SDI-12 interface (the sensor is only switched on at the time of the actual measurement), it is strongly recommended for IT security reasons to disable the automatic activation of the Wi-Fi hotspot. Otherwise the sensor will start the Wi-Fi hotspot every time the power is turned on.

4.3.1 Standard Commands

Name	Command	Response	Details
Address Query	?!	a<CR><LF>	a - the sensor address Sensor responds with its address. This will only work when only one sensor is connected.
Acknowledge Active	a!	a<CR><LF>	a - the sensor address The sensor responds with its address in order to show that it is available
Send Identification	a!	a13KISTERS_HY QUANffffmmmx xxxxxxxx<CR><L F>	a - the sensor address 13 - SDI-12 Version 1.3 KISTERS_ - company name (8 character) HYQUAN - sensor Name HyQuant (6 character) fff - firmware version (3 characters i.e. 1.01 = '101') Add-on information1: ▪ mmm - model (3 characters, L20, L50, VEL, L+V) ▪ xxxxxxxxxx - device serial number (10 characters, i.e. HYR-230001)
Change Address	aAb!	b<CR><LF>	a - the original sensor address b - the new sensor address

Table 7 – SDI-12 - Standard Commands

4.3.1.1 HyQuant L20, L50

Name	Command	Response	Details
Start Measurement (and request CRC)	aM! aMC!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	a - the sensor address ttt - The time taken by the sensor to generate the measurement output is shown in seconds. The datalogger must wait until this time has elapsed before requesting data. After power up, the sensor will take as long as the configured filter length to calculate the first valid value. As soon as a reading is available, this time will be zero. n = 5 - number of measurement values that will be returned

Name	Command	Response	Details
			When the sensor has measured the required data, it will generate a service request. This cannot take longer than ttt. Note that a service request will not be generated if ttt is equal to zero. When a CRC is requested, subsequent Send Data commands will respond with the appropriate CRC code (refer to details below). It is important to note that the SDI-12 standard limits the number of values that can be returned from a measurement started with the aM! command to 9. To obtain further values, aM1! and so on must be used..
Start additional Measurement 1 (and request CRC)	aM1! aMC1!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	See above n = 4
Start additional Measurement x (and request CRC)	aMx! aMCx! x >= 2	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	see above n = 0
Start Concurrent Measurement (and request CRC)	aC! aCC!	atttnn<CR><LF>	a - the sensor address ttt - time in seconds until the sensor will have the measurement ready. The data recorder must wait for this time until it can request the data. See above for detailed description. nn = 09 - number of measurements that will be returned When a CRC is requested the subsequent Send Data commands will respond with CRC (see below)
Send Data	aDO!	a+d+d+d+d+d<CR><LF> a+d+d+d+d+d<CRC><CR><LF>	a - sensor address +d - filtered level [user-defined unit] +d - current level [user-defined unit] +d - current distance [user-defined unit] +d - SNR [dB] +d - quality flag <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data additional aM1!	aDO!	a+d+d+d+d+d<CR><LF> a+d+d+d+d+d<CRC><CR><LF>	a - sensor address +d - sensor temperature [user-defined unit] +d - sensor tilt angle x direction [°] +d - sensor tilt angle y direction [°] +d - sensor height above reference level [user-defined unit] <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before

Name	Command	Response	Details
Send Data after aC! / aCC!	aD1!		
Send additional data after aMn! command	aDx!	a<CR><LF> a<CRC><CR><LF>	Only cases return data, other additional data is not available. x = 1 ... 9 (after M / MC) x = 2 ... 9 (after C / CC)

Table 8 – SDI-12 - Standard Commands > HyQuant L20, L50

4.3.1.2 HyQuant L+V

Name	Command	Response	Details
Start Measurement (and request CRC)	aM! aMC!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	a - the sensor address ttt - The time taken by the sensor to generate the measurement output is shown in seconds. The datalogger must wait until this time has elapsed before requesting data. After power up, the sensor will take as long as the configured filter length to calculate the first valid value. As soon as a reading is available, this time will be zero. n = 7 - number of measurement values that will be returned When the sensor has measured the required data, it will generate a service request. This cannot take longer than ttt. Note that a service request will not be generated if ttt is equal to zero. When a CRC is requested, subsequent Send Data commands will respond with the appropriate CRC code (refer to details below). It is important to note that the SDI-12 standard limits the number of values that can be returned from a measurement started with the aM! command to 9. To obtain further values, aM1! and so on must be used.
Start additional Measurement 1 (and request CRC)	aM1! aMC1!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	See above n = 3
Start additional Measurement 1 (and request CRC)	aM2! aMC2!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	See above n = 4
Start additional Measurement x (and request CRC)	aMx! aMCx! x >= 3	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	see above n = 0

Name	Command	Response	Details
		Request): a<CR><LF>	
Start Concurrent Measurement (and request CRC)	aC! aCC!	atttnn<CR><LF>	a - the sensor address ttt - time in seconds until the sensor will have the measurement ready. The data recorder must wait for this time until it can request the data. See above for detailed description. nn = 14 - number of measurements that will be returned When a CRC is requested the subsequent Send Data commands will respond with CRC (see below)
Send Data	aD0!	a+d+d+d+d+d+d +d<CR><LF> a+d+d+d+d+d+d +d <CRC><CR><LF>	a - sensor address +d - filtered level [user unit] +d - filtered velocity [user unit] +d - SNR level [dB] +d - SNR velocity [dB] +d - quality flag level +d - quality flag velocity +d - rain intensity [%] <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data additional aM1!	aD0!	a+d+d+d<CR><LF> > a+d+d+d<CRC><CR><LF>	a - sensor address +d - current level [user unit] +d - current distance [user unit] +d - current velocity [user unit] <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data after aC! / aCC!	aD1!		
Send Data additional aM2!	aD0!	a+d+d+d+d<CR><LF> <LF> a+d+d+d+d<CRC><CR><LF>	a - sensor address +d - sensor temperature [user-defined unit] +d - sensor tilt angle x direction [°] +d - sensor tilt angle y direction [°] +d - sensor height above reference level [user-defined unit] <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data after aC! / aCC!	aD2!		
Send additional data after aMn!	aDx!	a<CR><LF> a<CRC><CR><LF>	Only cases return data, other additional data is not available. x = 1 ... 9 (after M / MC)

Name	Command	Response	Details
command			x = 3 ... 9 (after C / CC)

Table 9 – SDI-12 - Standard Commands > HyQuant L+V

4.3.1.3 HyQuant Q

Name	Command	Response	Details
Start Measurement (and request CRC)	aM! aMC!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	a - the sensor address ttt - The time taken by the sensor to generate the measurement output is shown in seconds. The datalogger must wait until this time has elapsed before requesting data. After power up, the sensor will take as long as the configured filter length to calculate the first valid value. As soon as a reading is available, this time will be zero. n = 6 - number of measurement values that will be returned When the sensor has measured the required data, it will generate a service request. This cannot take longer than ttt. Note that a service request will not be generated if ttt is equal to zero. When a CRC is requested, subsequent Send Data commands will respond with the appropriate CRC code (refer to details below). It is important to note that the SDI-12 standard limits the number of values that can be returned from a measurement started with the aM! command to 9. To obtain further values, aM1! and so on must be used.
Start additional Measurement 1 (and request CRC)	aM1! aMC1!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	See above n = 6
Start additional Measurement 1 (and request CRC)	aM2! aMC2!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	See above n = 4
Start additional Measurement x (and request CRC)	aMx! aMCx! x >= 3	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	see above n = 0

Name	Command	Response	Details
Start Concurrent Measurement (and request CRC)	aC! aCC!	attnn<CR><LF>	a - the sensor address ttt - time in seconds until the sensor will have the measurement ready. The data recorder must wait for this time until it can request the data. See above for detailed description. nn = 16 - number of measurements that will be returned When a CRC is requested the subsequent Send Data commands will respond with CRC (see below)
Send Data	aD0!	a+d+d+d+d+d+d <CR><LF> a+d+d+d+d+d+d <CRC><CR><LF>	a - sensor address +d - filtered level [user unit] +d - filtered velocity [user unit] +d - SNR level [dB] +d - SNR velocity [dB] +d - discharge [user unit] +d - rain intensity [%] <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data additional aM1!	aD0!	a+d+d+d+d+d+d <CR><LF> a+d+d+d+d+d+d <CRC><CR><LF>	a - sensor address +d - current level [user unit] +d - current distance [user unit] +d - current velocity [user unit] +d - quality flag level +d - quality flag velocity +d - quality flag discharge <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data after aC! / aCC!	aD1!		
Send Data additional aM2!	aD0!	a+d+d+d+d<CR> <LF> a+d+d+d+d<CRC> ><CR><LF>	a - sensor address +d - sensor temperature [user-defined unit] +d - sensor tilt angle x direction [°] +d - sensor tilt angle y direction [°] +d - sensor height above reference level [user-defined unit] <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data after aC! / aCC!	aD2!		
Send additional data after aMn!	aDx!	a<CR><LF> a<CRC><CR><LF>	Only cases return data, other additional data is not available. x = 1 ... 9 (after M / MC)

Name	Command	Response	Details
command			x = 3 ... 9 (after C / CC)

Table 10 - SDI-12 - Standard Commands > HyQuant Q

4.3.1.4 HyQuant Velocity

Name	Command	Response	Details
Start Measurement (and request CRC)	aM! aMC!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	a - the sensor address ttt - The time taken by the sensor to generate the measurement output is shown in seconds. The datalogger must wait until this time has elapsed before requesting data. After power up, the sensor will take as long as the configured filter length to calculate the first valid value. As soon as a reading is available, this time will be zero. n = 5 - number of measurement values that will be returned When the sensor has measured the required data, it will generate a service request. This cannot take longer than ttt. Note that a service request will not be generated if ttt is equal to zero. When a CRC is requested, subsequent Send Data commands will respond with the appropriate CRC code (refer to details below). It is important to note that the SDI-12 standard limits the number of values that can be returned from a measurement started with the aM! command to 9. To obtain further values, aM1! and so on must be used.
Start additional Measurement 1 (and request CRC)	aM1! aMC1!	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	See above n = 3
Start additional Measurement x (and request CRC)	aMx! aMCx! x >= 2	atttn<CR><LF> When measurement is ready (Service Request): a<CR><LF>	see above n = 0
Start Concurrent Measurement (and request CRC)	aC! aCC!	atttnn<CR><LF>	a - the sensor address ttt - time in seconds until the sensor will have the measurement ready. The data recorder must wait for this time until it can request the data. See above for detailed description. nn = 08 - number of measurements that will be returned

Name	Command	Response	Details
			When a CRC is requested the subsequent Send Data commands will respond with CRC (see below)
Send Data	aD0!	a+d+d+d+d+d<C R><LF> a+d+d+d+d+d<C RC><CR><LF>	a - sensor address +d - filtered velocity [user unit] +d - current velocity [user unit] +d - SNR [dB] +d - quality flag +d - rain intensity [%] <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data additional aM1!	aD0!	a+d+d+d<CR><LF> > a+d+d+d<CRC>< CR><LF>	a - sensor address +d - sensor temperature [user-defined unit] +d - sensor tilt angle x direction [°] +d - sensor tilt angle y direction [°] <CRC> - 3-character CRC code is only appended if aMC! or aCC! commands were issued before
Send Data after aC! / aCC!	aD1!		
Send additional data after aMn! command	aDx!	a<CR><LF> a<CRC><CR><LF>	Only cases return data, other additional data is not available. x = 1 ... 9 (after M / MC) x = 2 ... 9 (after C / CC)

Table 11 - SDI-12 - Standard Commands > HyQuant Velocity

4.3.2 Extended Commands

Name	Command	Response	Details
Enable Wi-Fi	aXWIFI!	a0<CR><LF>	a - sensor address Enable the HyQuant Wi-Fi for sensor configuration with HyComm
Set Staff Gauge	aXSG+s!	a+d<CR><LF>	a - sensor address +s - the current staff gauge value +d - the new value of sensor height above reference level stored in the sensor
Set Sensor Height above reference level	aXSHAR+s!	a+d<CR><LF>	a - sensor address +s - the measured sensor height above reference level +d - the new value of sensor height above reference level stored in the sensor

Table 12 – SDI-12 - Extended Commands

4.4 Modbus

Note: To use the Modbus (RTU) protocol on the RS-485 interface, "Modbus" must be activated via the HyComm software. Navigation path: **CONFIGURATION > INTERFACES > MODBUS**.

4.4.1 Default Settings

The communication parameters of the RS-485 interface can also be set using the configuration software (Navigation path: **CONFIGURATION > INTERFACES > MODBUS**). Before commissioning, check that the Modbus server and client parameters match.

Parameter	Default
Baudrate	9600
Parity	None
Data bits	8
Stop bits	1
Modbus byte order	Big endian
Modbus float / uint32 word order	Big endian
Modbus default Server address	1

Table 13 – Modbus default settings

4.4.2 Modbus Register Mapping

R	W	Modbus Register	Internal Address	Length/ bytes	Type	Description	Data range
x		1	0	4	float32	Filtered level measurement	Depending on configured unit
x		3	2	4	float32	Current level measurement	Depending on configured unit
x		5	4	2	uint16	SNR Level	0 ... 100 dB
x		6	5	2	uint16	Quality flag level	See table Quality Flag Definition 
						Spare	
x		11	10	4	float32	Filtered velocity measurement	Depending on configured unit
x		13	12	4	float32	Current velocity measurement	Depending on configured unit
x		15	14	2	uint16	SNR Velocity	0 ... 100 dB
x		16	15	2	uint16	Quality flag velocity	See table Quality Flag Definition 
x		17	16	2	uint16	Rain intensity	0 ... 100%
						Spare	
		21	20	4	float32	Discharge	Depending on configured unit
		23	22	2	uint16	Quality flag discharge	See table Quality Flag Definition 
						Spare	
x		31	30	4	float32	Filtered distance	Depending on configured unit,
x		33	32	4	float32	Current distance	Depending on configured unit
						Spare	
x		41	40	4	float32	X axis tilt angle	Range $\pm 90^\circ$, Resolution: 0.1° [°]
x		43	42	4	float32	Y axis tilt angle	Range $\pm 90^\circ$, Resolution: 0.1° [°]
x		45	44	4	float32	Internal temperature	
x		47	46	2	uint16	Internal humidity	
						Spare	

R	W	Modbus Register	Internal Address	Length/ bytes	Type	Description	Data range
x		61	60	2	uint16	Model	0: L20 1: L50 2: VEL 3: L+V 4:Q
x		62	61	2	uint16	FW version major	
x		63	62	2	uint16	FW version minor	
x		64	63	2	uint16	FW version subminor	
x		65	64	2	uint16	Serial number [0 - 1]	
x		66	65	2	uint16	Serial number [2 - 3]	
x		67	66	2	uint16	Serial number [4 - 5]	
x		68	67	2	uint16	Serial number [6 - 7]	
x		69	68	2	uint16	Serial number [8 - 9]	
x	x	81	80	4	float32	Staff gauge value	[unit as configured]
x	x	83	82	4	float32	Sensor height above reference point	[unit as configured]
x	x	401	400	2	uint16	Enable Wi-Fi	In Write mode: 1: Wi-Fi enabled In Read mode: 0: Wi-Fi not enabled 1: Wi-Fi enabled

Table 14 – Modbus default settings

5 Maintenance



CAUTION

- Radar electromagnetic wave emissions.
- The device operates with very low emitting power radar beams.

Precaution:

- While the risk is minimal, it is advisable to avoid prolonged direct exposure.
- Vulnerable or highly sensitive individuals should exercise caution.
- Always follow standard safety guidelines when handling or installing radar devices.



WARNING

Risk of falling when activating the Wi-Fi hotspot.

If the HyQuant is installed at a great height above the water and/or the sensor is difficult to access, there is a risk of falling when activating the Wi-Fi hotspot.

- Use personal protective equipment (PPE) to prevent falls.
- If possible, use a swivelling bracket for installation. This allows you to swivel the sensor into a safe working area for configuration.



WARNING

Risk of drowning.

- Be particularly careful when working over or near to water.
- Wear a life jacket/buoyancy aid:
 - Ensure that workers at risk of falling into the water are provided with and wear a life jacket or buoyancy aid.
 - The life jacket should be thoroughly checked by the user prior to use.
- Never work alone: Always be accompanied when working near or over water.

The HyQuant radar sensor is designed for low maintenance. No special maintenance is required, nor is it necessary to replace components at regular intervals. However, the entire measurement point should be inspected and checked regularly. We recommend that the following maintenance operations are carried out at least once a year, e.g. as part of a measurement point inspection. Unscheduled maintenance is recommended after exceptional events (flooding) or if the readings are implausible.

Maintenance work to be carried out annually (recommended):

- Check that there are no obstructions between the radar sensor and the water surface. If necessary, remove flotsam, vegetation or other objects from the measurement section.
- Check the underside of the device with the radar antenna for soiling (insect nests, bird droppings, spider webs, other dirt deposits). If necessary, clean the underside of the device with a damp cloth and a little household detergent. Do not use aggressive cleaning agents.
- Check the sensor position and correct if necessary: the underside of the device must be aligned as parallel as possible to the water surface.
- Check the mounting point of the radar sensor for position and stability. Correct if necessary or if not possible, select a new fixing point.
- Check the angled plug connector and connecting cable for mechanical damage. If necessary, replace complete connecting cable with angled plug connector.
- Check all screw connections for sufficient tightening strength. Re-tighten screws if necessary.

- Check all metal fastening components for corrosion. If there is a risk of the radar sensor falling down due to material failure, replace corroded parts.
- Check [sensor alignment](#). Verify that the sensor is properly aligned relative to the water surface ($\pm 2^\circ$). For velocity sensors, ensure that the HyQuant is correctly positioned and aligned with the flow direction: the KISTERS 'K' marking on the sensor lid must be facing upstream (water flows from 'K' marking to the radome area of the lid).
- Finally, carry out a control measurement and compare with the reference value (e.g. level staff value). If this results in an unexpectedly large deviation, the radar sensor must be re-referenced. The cause of the deviation is often a change in the position of the mounting point.

Note: In accordance with the prevailing local conditions, it may be necessary to implement maintenance procedures at more frequent intervals. This is particularly the case in instances where there is a substantial accumulation of debris at the measuring point, or where the likelihood of increased soiling is high due to unfavourable environmental conditions.

6 Troubleshooting



CAUTION

- Radar electromagnetic wave emissions.
- The device operates with very low emitting power radar beams.

Precaution:

- While the risk is minimal, it is advisable to avoid prolonged direct exposure.
- Vulnerable or highly sensitive individuals should exercise caution.
- Always follow standard safety guidelines when handling or installing radar devices.



WARNING

Risk of falling when activating the Wi-Fi hotspot.

If the HyQuant is installed at a great height above the water and/or the sensor is difficult to access, there is a risk of falling when activating the Wi-Fi hotspot.

- Use personal protective equipment (PPE) to prevent falls.
- If possible, use a swivelling bracket for installation. This allows you to swivel the sensor into a safe working area for configuration.



WARNING

Risk of drowning.

- Be particularly careful when working over or near to water.
- Wear a life jacket/buoyancy aid:
 - Ensure that workers at risk of falling into the water are provided with and wear a life jacket or buoyancy aid.
 - The life jacket should be thoroughly checked by the user prior to use.
- Never work alone: Always be accompanied when working near or over water.



WARNING

- Incorrect connection of the supply power may result in damage to the HyQuant.
- The HyQuant has a reverse polarity protected interface and power circuit to protect against this. However, it is important to note that an improper or incorrect connection between the power and interface lines could still result in damage to the instrument.
- Check the pin-out configuration and ensure that no power is applied to the connector cables other than those specifically marked 'Power VCC +' and 'Power GND -'.

The device ensures high functional reliability, but malfunctions can occur during operation. Such malfunctions may result from the following causes:

Sensor is not ready for operation; no communication with the sensor possible

- Check the power supply to the device. Within range? Polarity reversed? Direct current?
- Check the cable connector: Mechanical damage? Not connected?
- Check the cable: Mechanical damage?
- Assess error messages if any.
- Assess changes in the installation site: for instance, new obstacles obstructing direct view to the water surface?

No SDI-12 or Modbus data

- SDI-12 or Modbus connection to the connected data logger: Is the wiring suitable for the interface used? Is the RS-485 interface mismatched? Is the sensor address configured correctly? Are there addressing conflicts with other SDI-12 sensors on the same bus?
- Is the required communication interface activated in the HyQuant L?
- Do the communication parameters of the Modbus (RTU) interface of the sensor and controller match?

Unstable or no readings

- [Sensor position](#) ¹⁵ parallel to the water surface? Is the 'K' marking raised on the lid of the device, facing upstream?
- Unstable water level?
- Check the lid: deposition of dirt or scratches on the radome?
- Obstruction in the measurement beam?
- False reflections on large object in close vicinity to the sensor?

Erroneous sensor configuration

- The sensor settings require verification to ensure they are both plausible and complete.
- Refer to section [Configuration](#) ²⁰ for a detailed description of configuration/settings.

7 Repair

KISTERS precision instruments and data loggers are produced in quality-controlled processes. All KISTERS production and assembly sites in Australia, New Zealand and Europe are ISO 9001 certified. All equipment is factory tested and/or factory calibrated before it is shipped to the client. This ensures that KISTERS products perform to their fullest capacity when delivered.

Despite KISTERS most rigorous quality assurance (QA), malfunction may occur within or outside of the warranty period. In rare cases, a product may not be delivered in accordance with your order.

In such cases KISTERS' return and repair policy applies. For you as a customer, this means the following:

- Contact KISTERS using the Repair Request Form and the Declaration of Contamination made available online:

Region (Language)	Download Link
Asia-Pacific (English)	Repair Request Form (APAC) Declaration of Contamination (APAC)
Europe, the Middle East and Africa (English)	Repair Request Form (EMEA) Declaration of Contamination (EMEA)
Germany (German)	Repair Request Form (DE) Declaration of Contamination (DE)

In response you will receive a reference number that must be referenced on all further correspondence and on the freight documents accompanying your return shipment.

- Please provide as much information and/or clear instructions within the return paperwork. This will assist our test engineers with their diagnosis.
- Please do not ship the goods prior to obtaining the reference number. KISTERS will not reject any equipment that arrives without reference number; however, it may take us longer to process.

Custom requirements for items sent to KISTERS for warranty or non-warranty repairs: Check with your national customs/tax authorities for details, processes and paperwork regarding tax exempt return of products. Typically, special custom tariff codes are available (such as HS Code = 9802.00) that verify the item is being returned for repair and has no commercial value. Please note that the customs invoice / dispatch documents should also clearly state: "Goods being returned to manufacturer for repair – No Commercial value". It is mandatory to have any returned goods accompanied by a commercial invoice on headed paper. KISTERS reserves the right to charge the customer for time spent rectifying incorrect customs documents.

Note: Please ensure that your goods are packed carefully and securely. Damage that occurs during transit is not covered by our warranty and may be chargeable.

8 Technical Data

Technical specifications	HyQuant – L20 / L50	HyQuant V	HyQuant L + V
Radar Type / Frequency Band	FMCW 60 GHz V-Band Radar level sensor	FMCW Doppler 60 GHz V-Band Radar Velocity sensor.	Integrated FMCW 60 GHz V-band Radar Level (L) and Doppler Velocity (V) sensor
Measurement Range	- L20: 0.10 ... 20 m - L50: 0.15 ... 50 m	- L: 0.10 ... 20 m - V: 0.05 ... 15 m/s	
Sampling Rate	1 Hz (1 measurement / second)		
Accuracy	≤ 2 mm	L: ≤ 2 mm V: 0.02 ... 4.5 m/s: 1% of measured value 4.5 ... 15 m/s: 2% of measured value	
Resolution	±1 mm	L: ±1 mm V: 1 mm/s	
Blind Zone / Blanking Distance	- L20: 0.1 m - L50: 0.15 m	0.1 m	
Minimum Ripple - Velocity	N/A	2–3 mm	
Supply Voltage (Range)	9 ... 30 V DC		
Power Consumption @ 12 V DC	Typical < 20 mA, peak operation < 80 mA		
Beam Angle (azimuth by elevation)	8° by 8°	- L: 8° by 8° - V: 8° by 12°	
Ingress Protection	IP68	IP68 means that the device is both dustproof and protected against continuous immersion in water to a maximum depth of 1.5 metres for a maximum of 3 hours. It does not provide protection against other liquids such as salt water, soapy water, alcohol or heated liquids. Note: To achieve IP68, ensure that the 8-pin M12 connector is correctly inserted and securely fastened.	
Communication & Interfaces	SDI-12, Modbus, Wi-Fi		
Operating Temperature Range	-40 ... +80 °C		
Humidity Range	Relative Humidity 0 ... 100% non-condensing		
Dimensions & Weight	- HyQuant sensor with backplate (L×W×H): 160 × 97 × 91 mm, 1.15 kg - Packaged Dimensions (L×W×H): 300 × 300 × 187 mm, 2.5 kg		
Signal Connector	M12 8-pin		
Materials	Housing: Powder-coated aluminium and Radome / Front panel (lid) HDPE		

Technical specifications	HyQuant - L20 / L50	HyQuant V	HyQuant L + V
Compliance	CE, FCC Class B, UL, RoHS, further information available on our website		

Table 15 - Technical Data

9 Obligations of the Operator and Disposal

This chapter contains the following subsections:

- [Obligations of the Operator](#) ⁵⁴
- [Dismantling / Disposal](#) ⁵⁴

9.1 Obligations of the Operator

European Union

In the Single European Market it is the responsibility of the operator to ensure that the following legal regulations are observed and complied with: national implementation of the framework directive (89/391/EEC) and the associated individual directives, in particular 2009/104/EC, on minimum safety and health requirements for the use of work equipment by employees at work.

Worldwide

Regulations: If and where required, operating licences must be obtained by the operator. In addition, national or regional environmental protection requirements must be complied with, regardless of local legal provisions regarding the following topics:

- Occupational safety
- Product disposal

Connections: Local regulations for electrical installation and connections must be observed.

9.2 Dismantling / Disposal

When disposing of the units and their accessories, the applicable local regulations regarding environment, disposal and occupational safety must be observed.

Before dismantling

- Electrical Devices:
 - Switch off the units.
 - Disconnect electrical appliances from the power supply, regardless of whether the appliances are connected to the mains or to another power source.
- Mechanical devices:
 - Fix all loose components. Prevent the device from moving independently or unintentionally.
 - Loosen mechanical fastenings: Please note that appliances can be heavy and that loosening the fastenings may cause them to become mechanically unstable.

Disposal

Operators of old appliances must recycle them separately from unsorted municipal waste. This applies in particular to electrical waste and old electronic equipment.

Electrical waste and electronic equipment must not be disposed of as household waste!

Instead, these old appliances must be collected separately and disposed of via the local collection and return systems.

Integrated or provided batteries and accumulators must be separated from the appliances and disposed of at the designated

collection point. At the end of its service life, the lithium-ion battery must be disposed of according to legal provisions.

EU WEEE Directive

As players in the environmental market, KISTERS AG is committed to supporting efforts to avoid and recycle waste. Please consider:

- Avoidance before recycling!
- Recycling before disposal!



This symbol  indicates that the scrapping of the unit must be carried out in accordance with Directive 2012/19/EU. Please observe the local implementation of the directive and any accompanying or supplementary laws and regulations.

10 Regulatory and Compliance Information

EU

Technology	Maximum Rated Output Power	Notes
WLAN 2.4 GHz	15.0 dBm EIRP (average)	Includes up to 2 dB FCC/ISED-based tune-up tolerance. Country-specific EIRP may vary.
Radar 60 GHz	19.0 dBm EIRP (average)	Includes up to 2 dB FCC/ISED-based tune-up tolerance. Country-specific EIRP may vary.

During configuration, the radar and Wi-Fi transmit simultaneously. During normal operation, only the radar is active.

US / Canada

Technology	Maximum Rated Output Power	Notes
WLAN 2.4 GHz	21.5 dBm EIRP (average)	Includes up to 2 dB FCC/ISED tune-up tolerance.
Radar 60 GHz	21.0 dBm EIRP (average)	Includes up to 2 dB FCC/ISED tune-up tolerance.

RF Exposure statement

This equipment complies with FCC and ISED radiation exposure limits set forth for an **uncontrolled environment**.

To ensure compliance:

- This equipment **should be installed and operated with a minimum distance of 20 cm** between the radiator and any body part of nearby persons.
- This transmitter **must not be co-located or operated in conjunction with any other antenna or transmitter**.

Failure to observe these guidelines may result in non-compliance with Canadian RF exposure regulations.

Compliance statement

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications made to this equipment not expressly approved by KISTERS AG may void the FCC authorization to operate this equipment.

FCC certified modules

This product contains FCC-certified modules:

- FCC ID: RI7WE866C6

These radio modules have been certified separately and comply with the requirements of FCC Part 15.

Contact Data

Europe	KISTERS Europe	 +49 2408 9385 0
		 hydromet.sales@kisters.eu
		 www.kisters.eu
Australia	KISTERS Australia	 +612 9601 2022
		 sales@kisters.com.au
		 www.kisters.com.au
New Zealand	KISTERS New Zealand	 +64 7 857 0810
		 sales@kisters.co.nz
		 www.kisters.co.nz
Latin America	KISTERS Latin America	 +57 350 575 4079
		 sales@kisters-latam.com
		 www.kisters-latam.com
North America	KISTERS North America	 +1 561 459 4876
		 kna@kisters.net
		 www.kisters.net
Spain	KISTERS Ibérica	 info@kisters.es
		 www.kisters.es
France	KISTERS France	 +33 1 4120 9200
		 info@kisters.fr
		 www.kisters.fr
Canada	KISTERS Canada	 kna@kisters.net
		 www.kisters.net

